



- 1 White (Reverb)
- 2 Brown (Ground)
- 3 Yellow (Channel 3)
- 4 Blue (Rhythm/Solo)
- 5 Green (channel 1/2)
- 6 Red (Connected to pin 7)
- 7 Black (Connected to pin 6)

*When footswitch is connected the manual channel switching is overruled.*