


Service Manual

Amplifier

SE-CA10

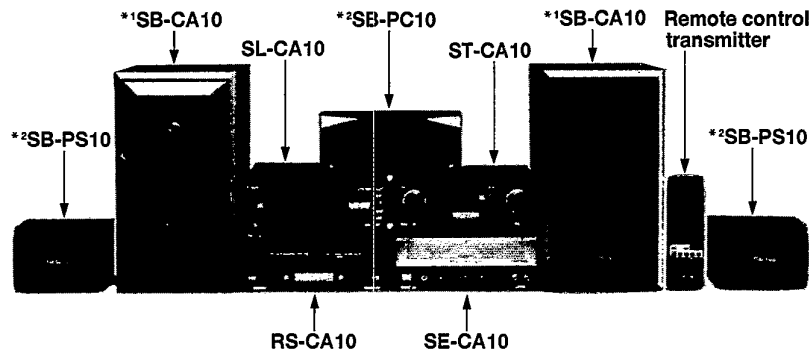

Colour

(K)...Black Type

Area

Suffix for Model No.	Area	Colour
(E)	Europe.	(K)
(EB)	Great Britain.	
(EG)	Germany and Italy.	
(GC)	Asia, Latin America, Middle Near east and Africa.	
(GN)	Oceania.	

Because of unique interconnecting cables, when a component requires service, send or bring in the entire system.

SPECIFICATIONS

Amplifier section

Power output

DIN 1 kHz, THD 1%, both channel driven 2×50 W (6Ω)

RMS 1 kHz, THD 10%, both channel driven 2×70 W (8Ω)

[For (E, EB, EG, GN) areas] 2×65W (6Ω)

[For (GC) area]

PRO LOGIC mode

DIN 1 kHz, THD 1%

MAIN (both channels driven) 2×40 W (6Ω)

SURROUND 40 W (4Ω+4Ω)

CENTER 40 W (8Ω)

RMS 1 kHz, THD 10%

MAIN (both channels driven) 2×50 W (6Ω)

SURROUND 50 W (4Ω+4Ω)

CENTER 50 W (8Ω)

Total harmonic distortion

Rated power at 1 kHz 1% (6Ω)

Half power at 1 kHz 0.09% (6Ω)

Load impedance

MAIN 6Ω – 8Ω

SURROUND

4Ω – 8Ω

CENTER

8Ω

S/N (rated power)

90 dB

MAIN

General

Power consumption

235 W

Power supply

[For (E, EG) areas] 230 V, AC 50/60 Hz

[For (EB, GN) areas] 230 – 240 V, AC 50/60 Hz

[For (GC) area] 110/127/220/230 – 240 V, AC 50/60 Hz

Dimensions (W×H×D)

270×118.5×341.5 mm

Weight

5.2 kg

Note:

Specifications are subject to change without notice.

Weight and dimensions are approximate.

Total harmonic distortion is measured by the digital spectrum analyzer.

System	Tuner	CD changer	Amplifier	Cassette deck	Speakers
SC-CA10	ST-CA10	SL-CA10	SE-CA10	RS-CA10	*1 SB-CA10 *2 SB-PT10 (SB-PC10+SB-PS10)

* 1 Made in PAES

* 2 For (E, EB, EG) areas....Made in PAES
For (GC, GN) areas....Made in NABEL

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Technics®

© 1995 Matsushita Electric Industrial Co., Ltd.
All rights reserved. Unauthorized copying and distribution is a violation of law.


CONTENTS

	Page
ACCESSORIES	2
BEFORE REPAIR AND ADJUSTMENT	2
PROTECTION CIRCUITRY	3
CAUTION FOR AC MAIN LEAD	3
LOCATION OF CONTROLS	4
INSTALLATION	4
CONNECTIONS	5~9
USING THE DOLBY PRO LOGIC SURROUND	10
ADJUSTING SPEAKER OUTPUT LEVEL	11
ADJUSTING THE DELAY TIME	12
ENJOYING WITH SURROUND OR 3 STEREO	12
OPERATION CHECK AND MAIN COMPONENT REPLACEMENT PROCEDURES	13~15

	Page
REPLACEMENT OF THE FOOT	16
POWER SOURCE ON/OFF OF THIS UNIT	16
MEASUREMENTS AND ADJUSTMENTS	16
SCHEMATIC DIAGRAM	17~21
PRINTED CIRCUIT BOARD DIAGRAM	22~25
WIRING CONNECTION DIAGRAM	25
BLOCK DIAGRAM	26, 27
CABINET PARTS LOCATION	28
REPLACEMENT PARTS LIST	29, 30, 32, 33
RESISTORS AND CAPACITORS	31, 32
PACKAGING	33

ACCESSORIES

 
- AC power supply cord
 - For (E, EG, GC) areas: (RJA0019-2K)..... 1
 - For (EB) area: (RJA0049-K)..... 1
 - For (GN) area: (RJA0036-K)..... 1



(RJA0019-2K)




 (RJA0049-K)



(RJA0036-K)

 - Remote control transmitter
 - For (E, EG) areas: (RAK-CH744WH)..... 1
 - For (EB, GC, GN) areas:
(RAK-CH745WH) 1



- Batteries
(UM-4, "AAA", R03)..... 2
Note: These are available on sales route.



- Flat cable
 - Long (REX0661) 1
 - Middle (REX0660)..... 1
 - Short (REX0608)..... 1



(REX0661)



(REX0660)



(REX0608)

- AM (LW/MW) loop antenna
(RSA0012) 1



- FM indoor antenna
 - For (E, EB, EG) areas: (RSA0007) 1
 - For (GC, GN) areas: (RSA0006)..... 1



(RSA0007)



(RSA0006)

- Attachment plug
For (EB) area only: (SJP9009)..... 1



- Mounting screw
(STN3+12AFZ)..... 1



- Antenna holder
(RMN0244)..... 1



- Speaker cords
(REE0393) 2



- Power plug adapter
For (GC) area only: (SJP5213-1) 1



BEFORE REPAIR AND ADJUSTMENT

- Turn off the power supply using a 10Ω, 10 W resistor, connect both ends of power supply capacitors (C701, C702) in order to discharge the voltage.
- Before turning the power supply on, after completion of repair, slowly apply the primary voltage by using a power supply voltage controller to make sure that the consumed current at 50/60 Hz in NO SIGNAL mode should be shown below with respect to supply voltage 230 V/240 V/110 V.

Area	(E) (EG)		(EB) (GN)		(GC)		
Power supply voltage	AC 230 V		AC 240 V		AC 110 V		AC 240 V
Consumed current 50/60 Hz	50 Hz	80~230 mA	50 Hz	80~230 mA	50 Hz	200~500 mA	100~250 mA
	60 Hz	64~184 mA	60 Hz	64~184 mA	60 Hz	160~400 mA	80~200 mA

■ PROTECTION CIRCUITRY

The protection circuitry may have operated if either of the following conditions is noticed:

- * No sound is heard when the power is switched ON.
- * Sound stops during a performance.

The function of this circuitry is prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of this unit are used.

If this occurs, follow the procedure outlined below:

1. Switch OFF the power.
2. Determine the cause of the problem and correct it.
3. Switch ON the power once again.

Note:

When the protection circuitry functions, the unit will not operate unless the power is first switched OFF and then ON again.

■ CAUTION FOR AC MAIN LEAD



[(EB) area code mode only]

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

Ad 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.

Check for the ASTAd mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local

CAUTION!

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFETY. THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13-AMPERE SOCKET.

If a new plug is to be fitted please observe the wiring code as shown below.

If in any doubt please consult a qualified electrician.

IMPORTANT

The wire in this mains lead are coloured in accordance with the following code:

Blue: Neutral

 
Brown: Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK.


This apparatus was produced to BS 800.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured RED.

Under no circumstances should either of these wires be connected to the earth terminal of the three pin plug, marked with the letter E or the Earth Symbol .


Before use

Remove the connector cover as follows.

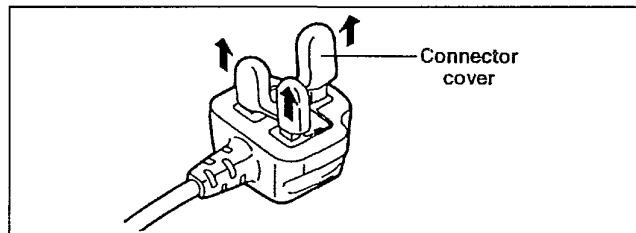


How to replace the fuse

1. Remove the fuse cover with a screwdriver.

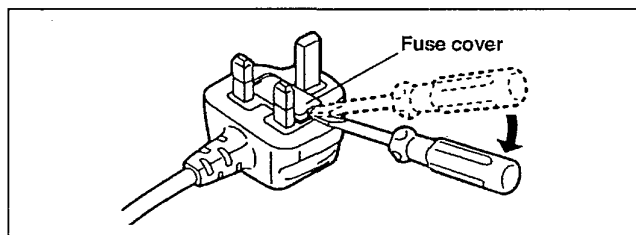


2. Replace the fuse and attach the fuse cover.

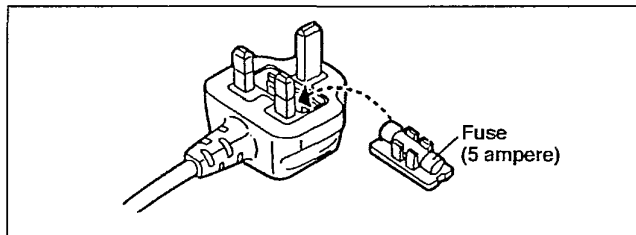

LOCATION OF CONTROLS

- ① **Output power meter**
Indicates the output (watts) of this unit.
- ② **Power "STANDBY ⏻/ON" switch (POWER, STANDBY ⏻/ON)**
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
- ③ **Standby indicator (STANDBY)**
When the unit is connected to the AC mains supply, this indicator lights up in standby mode and goes out when the unit is turned on.
- ④ **Headphones jack (PHONES)**
- ⑤ **DOLBY PRO LOGIC mode select button (MODE)**
- ⑥ **Test signal button (TEST)**
- ⑦ **Delay time adjust button (DELAY TIME)**

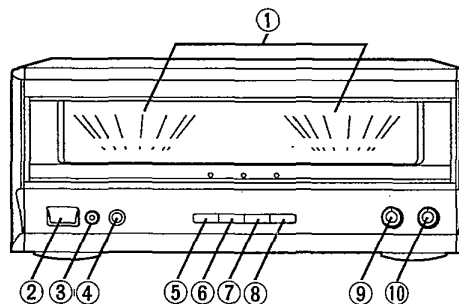

- ⑧ **Center mode select button (CENTER MODE)**
- ⑨ **Bass control (BASS)**
- ⑩ **Treble control (TREBLE)**

INSTALLATION

Stacking the components

Horizontal stacking **A**

- Ⓐ CD changer (SL-CA10)
- Ⓑ Tuner (ST-CA10)
- Ⓒ Cassette deck (RS-CA10)
- Ⓓ Amplifier (SE-CA10)

Vertical stacking **B**

- Ⓐ Tuner (ST-CA10)
- Ⓑ Amplifier (SE-CA10)
- Ⓒ CD changer (SL-CA10)
- Ⓓ Cassette deck (RS-CA10)

Placement of speakers **C**

As well as enjoying normal stereo reproduction with the left and right front speakers, a center speaker and surround speakers can also be connected to the unit in order to enjoy the sound performance of DOLBY PRO LOGIC Systems.


We recommend that surround speakers be placed on the side of or slightly behind the listener, and about one meter higher than ear level.

However the position should be adjusted to your personal preference, because the effect varies to some degree depending upon the type of music and the music source.

- Ⓐ Front speaker (Left) (SB-CA10)
- Ⓑ Center speaker (SB-PC10)
- Ⓒ TV (not included)
- Ⓓ This system
- Ⓔ Front speaker (Right) (SB-CA10)
- ① Surround speaker (Left) (SB-PS10)
- ② Surround speaker (Right) (SB-PS10)


Caution

Use these speakers only with the recommended system. Failure to do so may lead to damage to the amplifier and/or the speaker, and may result in the risk of fire. Consult a qualified service person if damage has occurred or if you experience a sudden change in performance.

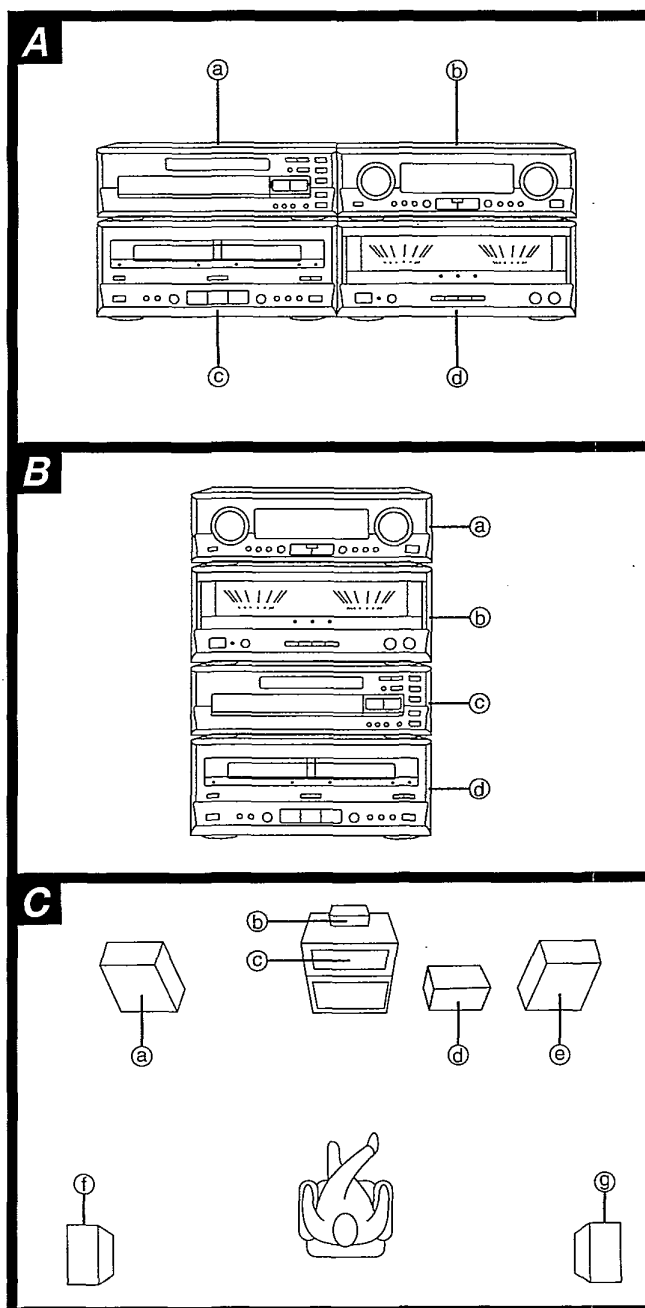

■ CONNECTIONS

● Flat cable (included) connections

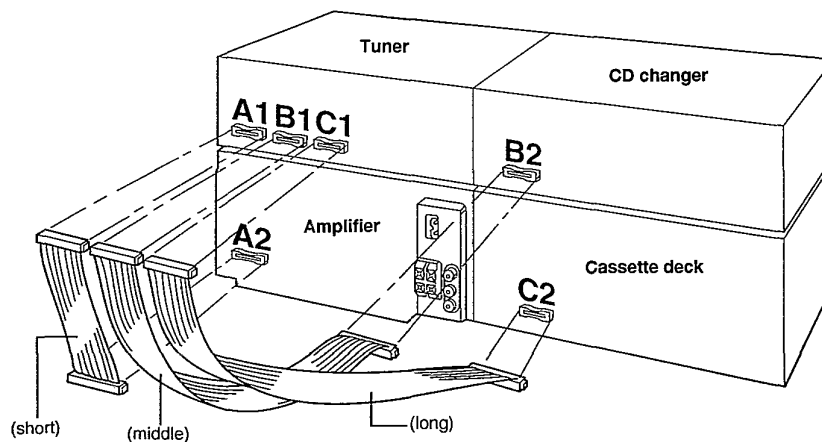


Before making connections:

Make sure the white line on the cable is on the right side.

To unplug cables:


Hold the connector from both ends.

Note Do not try connecting or disconnecting the flat cables while the power is switched to ON.

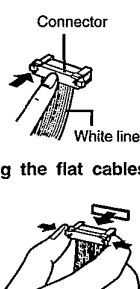


After connection:


Fold and press the cable as flat to the back of the unit as possible. (To minimize noise pickup while listening an MW/LW broadcast)

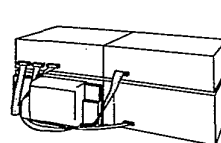

or

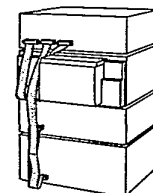


● Antenna connections

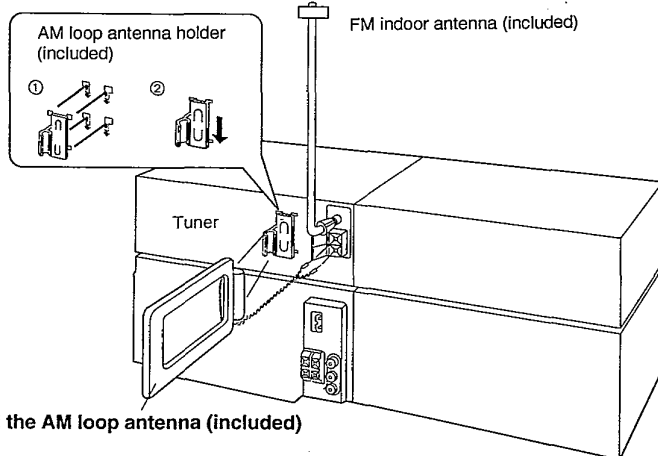


How to install the AM loop antenna (included)

 
① Strip off the outer covering.




② Insert the wire.

 

③ Close the lever.

 

④ Attach the AM loop antenna to the

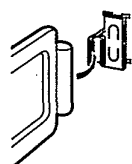


Note


- To minimize noise pickup, bundle the loop antenna cord using a tape or so to keep the flat cables away from the AM loop antenna cord.
- You may attach the antenna holder to a rack or other structure.

● When mounting the antenna to a column or rack


AM loop antenna holder (included)

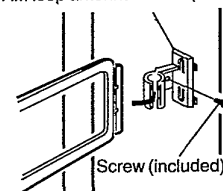

● Connection of front and surround speakers

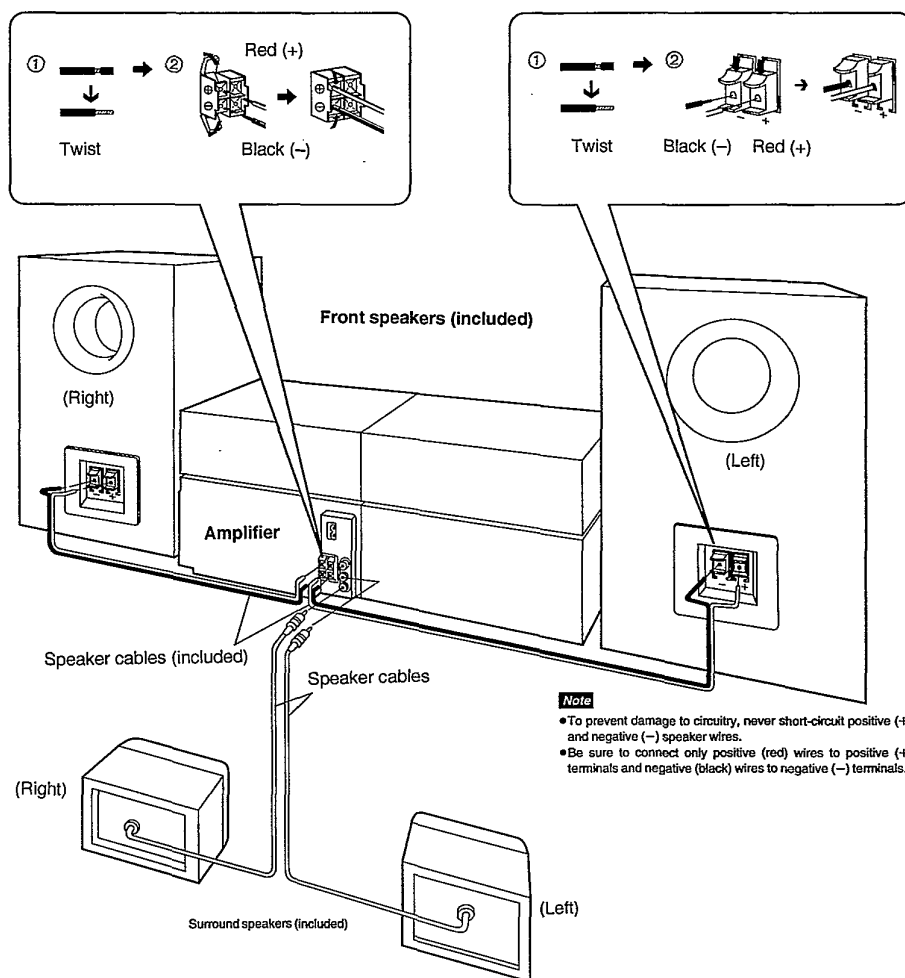


● Connection of center speaker

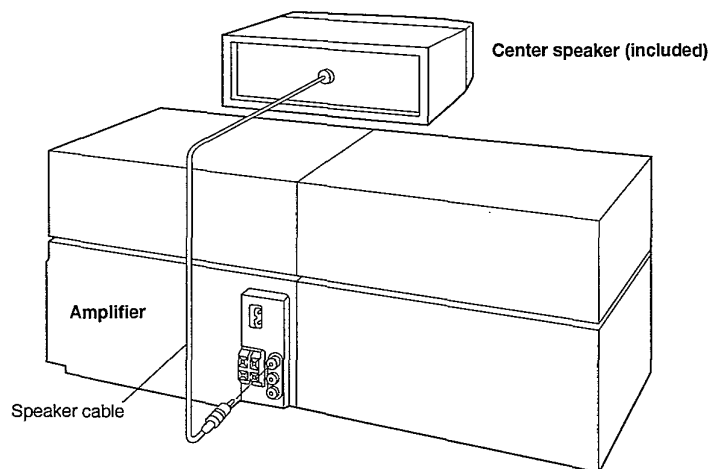


• Connection of AC power supply cord

- Plug the cord into an outlet only after all other connections have been made.

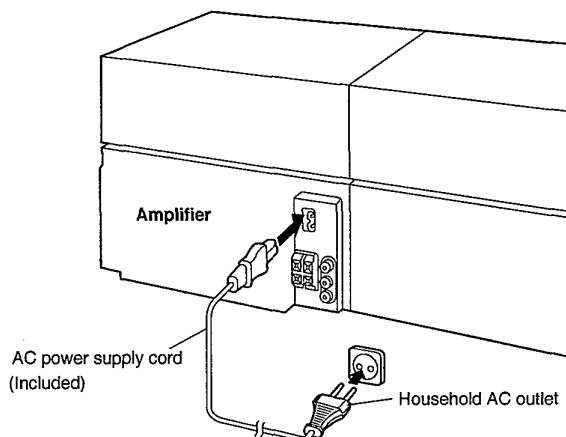

[For (E, EG, GN) areas.]

 

Insertion of Connector:

Even when the connector is perfectly inserted, depending on the type of inlet used, the front part of the connector may jut out as shown in the drawing. However there is no problem using the unit.

[For (EB) area only]

BE SURE TO READ THE CAUTION FOR AC POWER SUPPLY CORD ON PAGE 3 BEFORE THE FOLLOWING CONNECTIONS.

[For (GC) area only]

Set the voltage selector to the voltage setting for the area in which the unit will be used.

 
[Use a minus (-) screwdriver]

Note

If the power supply in your area is 117 V or 120 V, set to the "127 V" position.

Note that this unit will be seriously damaged if this setting is not made correctly.

If the power plug will not fit your socket, use the power plug adapter (included).



• Optional antenna connections

FM outdoor antenna (not included) **A**

The outdoor antenna should be used when using this unit in mountainous areas or in spaces enclosed by reinforced concrete where the FM indoor antenna (included) does not provide satisfactory reception.

Note

An outdoor antenna should be installed by a qualified technician only.

AM (MW/LW) outdoor antenna (not included) **B**



The outdoor antenna should be used when using this unit in mountainous areas or in spaces enclosed by reinforced concrete where the AM loop antenna (included) does not provide satisfactory reception.

Use 5–12 m of vinyl-sheathed wire horizontally at the window, or a convenient location.

When the unit is not in use, disconnect the outdoor antenna to prevent possible damage from lightning. Never use an outdoor antenna during an electrical storm.

Note



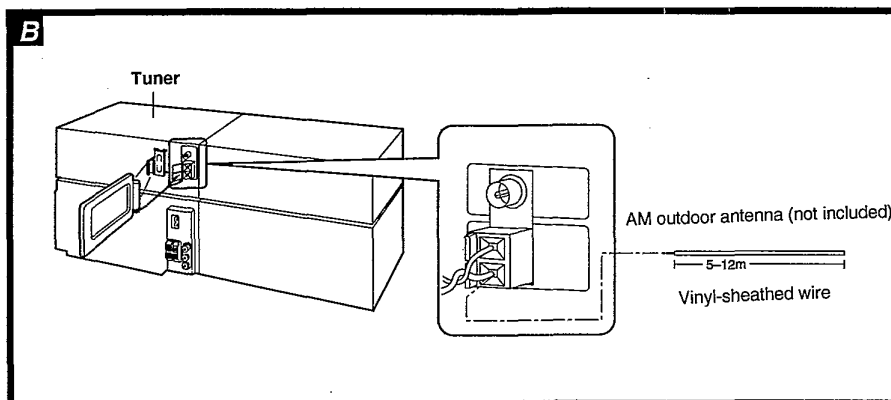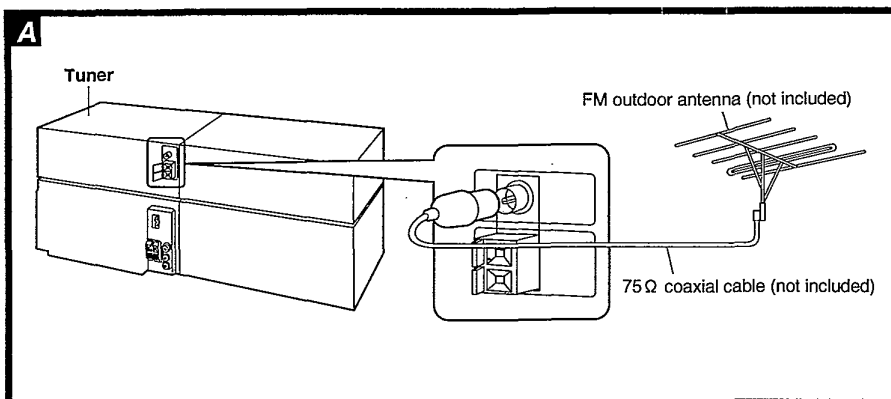

Be sure to connect the AM loop antenna even when an outdoor antenna is used.





• External unit connections

- Make sure that the power supply for all components has been turned off before making any connections.
- For details, refer to the operating instructions of the units which are to be connected.
- All peripheral components and cables sold separately.

Stereo connection cable (not included)

White (L)  
 Red (R)  

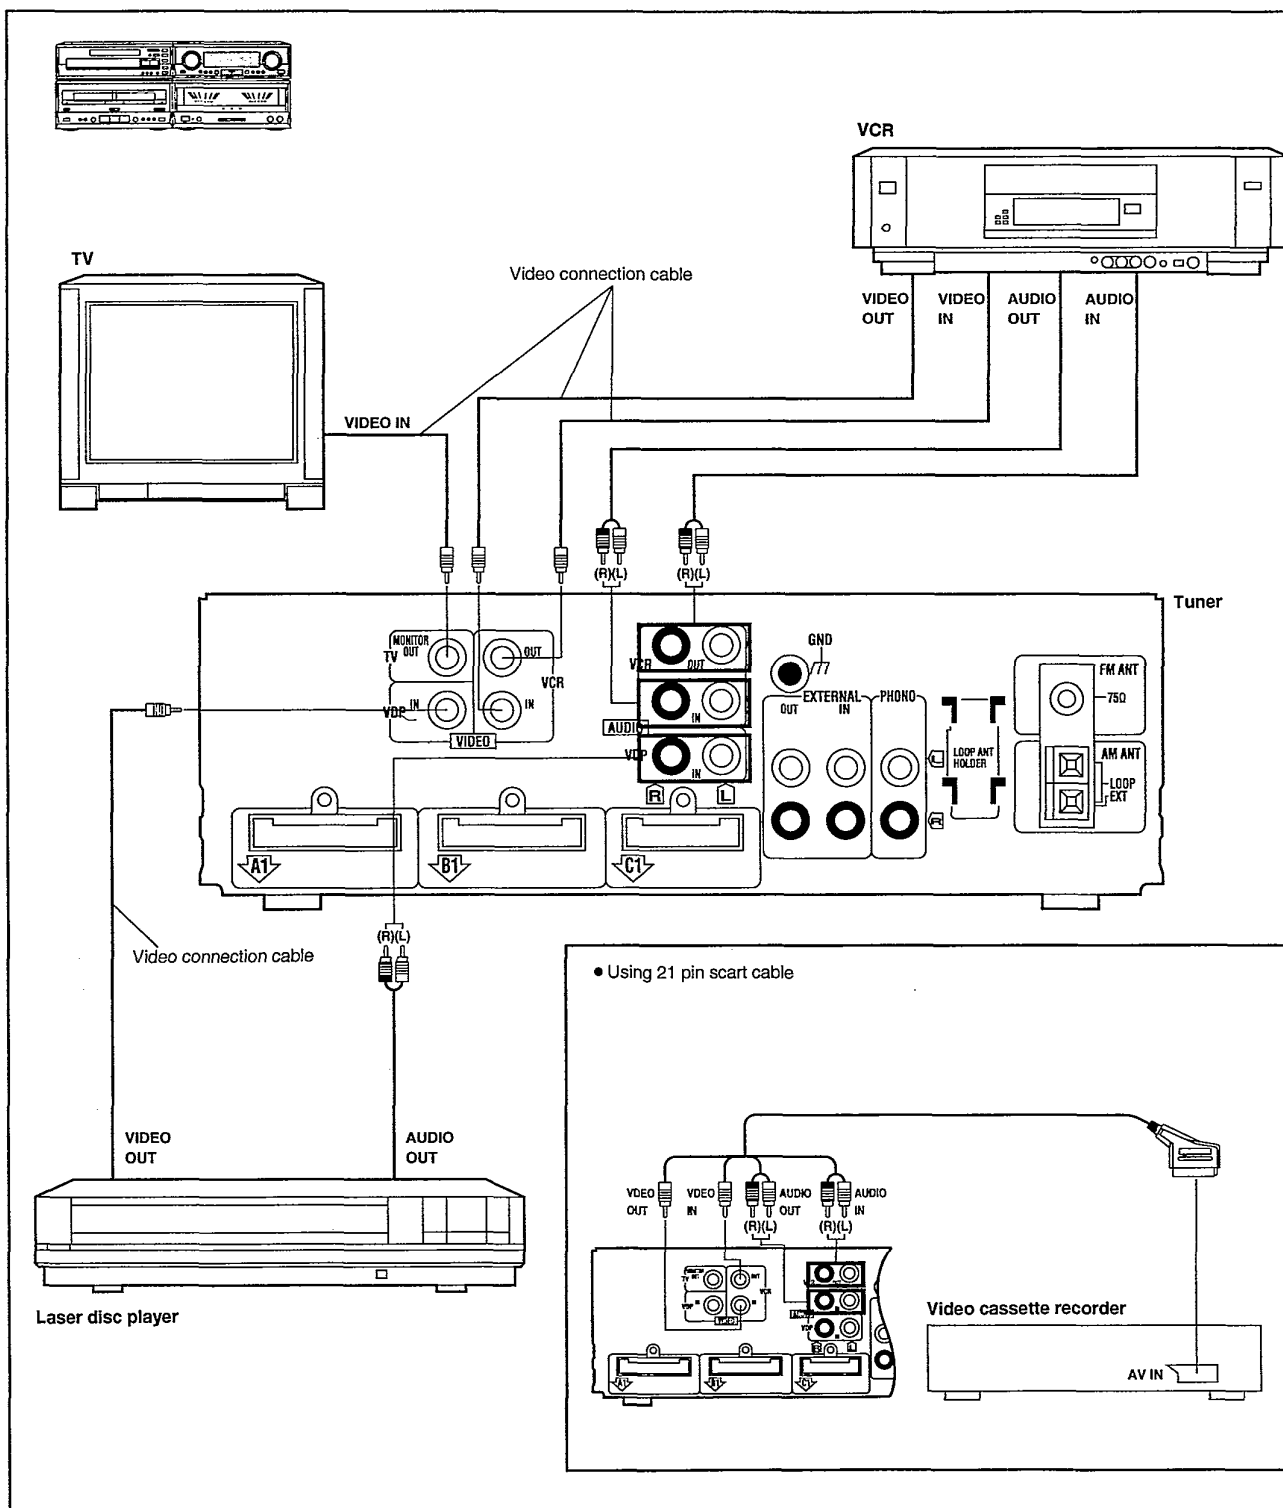

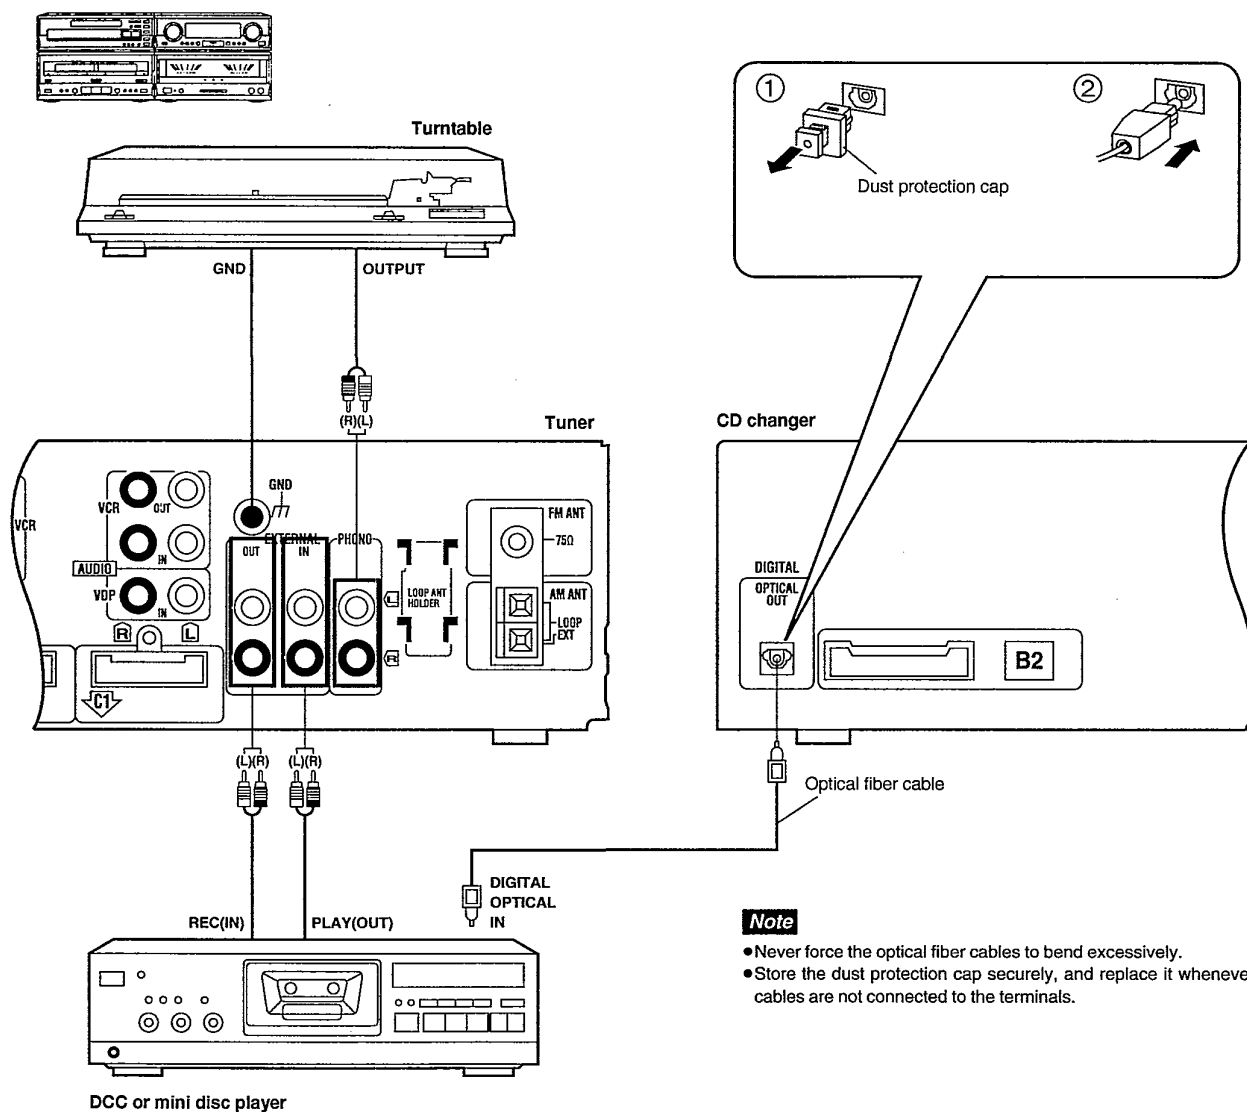


■ USING THE DOLBY PRO LOGIC SURROUND

By combining front, center and surround speakers, you can enjoy the SURROUND mode which conveys a feeling of presence or the 3 STEREO mode which conveys a feeling of orientation.

SURROUND

By reproducing the feeling of depth and movement of sound, video software or compact discs recorded with Dolby Surround provide the listener with a feeling of presence like that of a movie theater.

To enjoy SURROUND, be sure to connect the surround speakers.

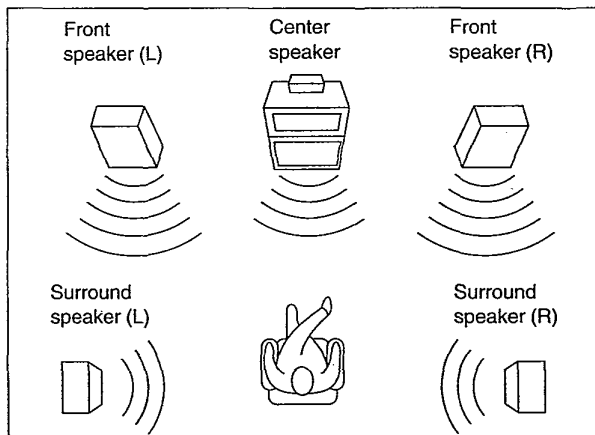

Setting the center mode

For Dolby Pro Logic systems, center mode setting is necessary to play back bass sounds effectively. Set the center mode in accordance with the size of your center speaker.

- 1 Switch on the power.**
- 2 Press MODE to select "SURROUND" or "3 STEREO".**
Each time you press the button, the display will change as follows:
SURROUND → 3 STEREO → OFF
- 3 Press CENTER MODE to select "NORMAL" mode.**
Each time you press the button, the display will change as follows:
NORMAL → WIDE → PHANTOM

Note

"PHANTOM" will not be displayed when you select "3 STEREO" in step 2.

NORMAL:

When the center speaker is smaller than the front speakers

WIDE:

When the center speaker is the same or larger size as the front speakers

PHANTOM: **SURROUND only**

When no center speaker is connected.



Note

In the PHANTOM mode, the sound which would have been sent to the center speaker will be divided equally between both the left and right front speakers.

3 STEREO

You can enjoy audio/video sources with clear sound, more presence and a good feeling of orientation. 3 STEREO can be used with sources not recorded in DOLBY SURROUND.

To enjoy 3 STEREO, be sure to connect the center speaker.

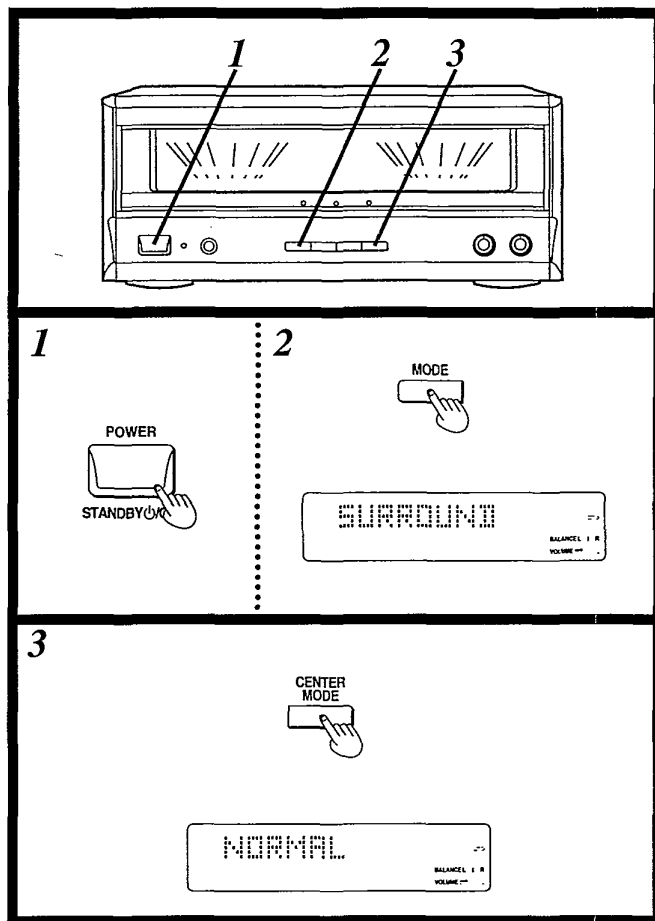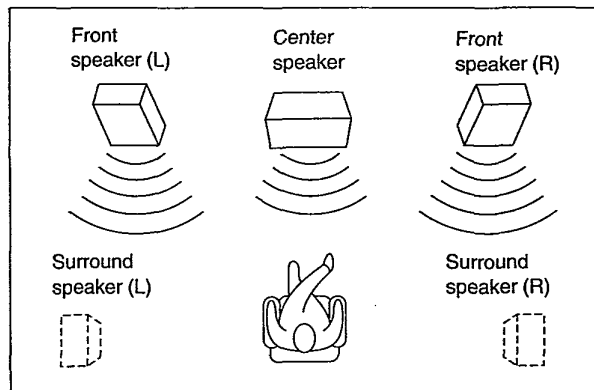

■ ADJUSTING SPEAKER OUTPUT LEVEL

In order to reproduce the movement of the sound and its clear orientation, it is important to adjust the output level of each speaker. Adjust output to the correct levels while listening to the test signal. Before starting, check your front speakers are correctly balanced.

1 Press MODE to select "SURROUND" or "3 STEREO".

2 Press TEST to output a test signal.

The test signal is emitted in the following order:

For SURROUND mode

Front speaker (left) → Center speaker



Surround speakers (left, right) ← Front speaker (right)

Note

The test signal is not emitted from the center speaker when the center mode is on PHANTOM.

For 3 STEREO mode

Front speaker (left) → Center speaker



Front speaker (right) ←

3 Turn VOLUME to set the volume level normally used for enjoying the source.

4 Press CENTER (–) or (+) or SURROUND (–) or (+) on the remote control to adjust the output level balance.

Adjust the output level of each speaker from the listening position until they are all identical.



Output levels can be varied within a range of ± 12 dB with front speaker output level serving as the zero point.

Note

- The test signal is output only by the speaker you are now adjusting and does not repeat the sequence until adjustments are complete.
- Remember you cannot adjust output level of the surround speakers if you selected the 3 STEREO mode in step 1.

To stop the test signal:

Press TEST.

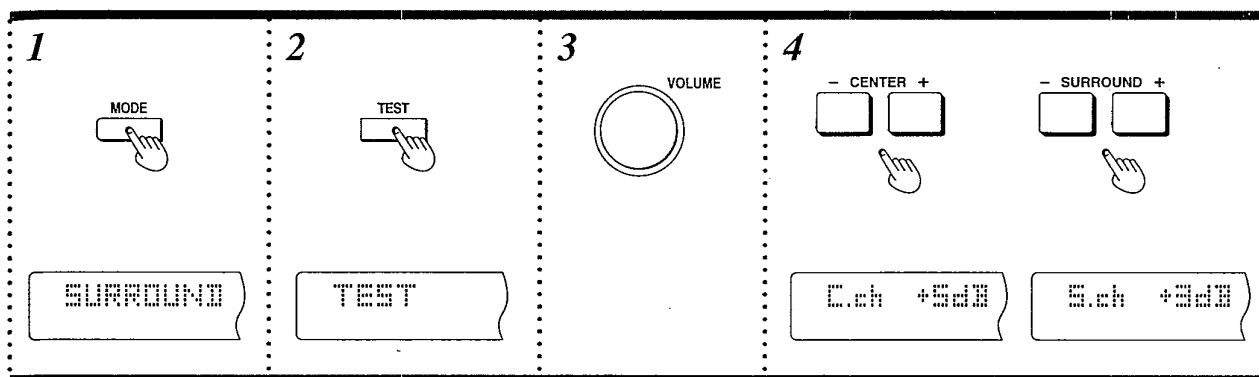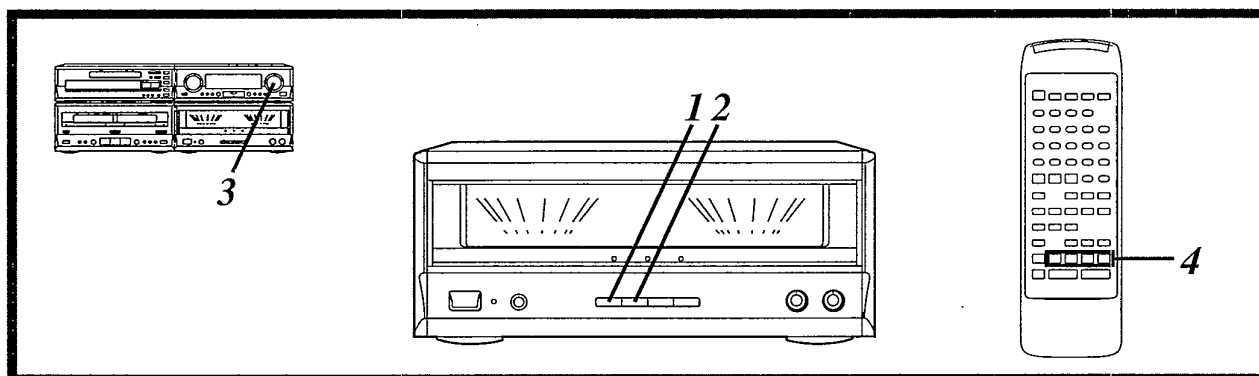

■ ADJUSTING THE DELAY TIME

When enjoying with SURROUND only

Adjust the sound from the surround speakers until the proper effect is produced.

1 Press MODE to select "SURROUND".

2 Press DELAY TIME to set to the suitable time.


When the button is pressed, the current delay time is displayed, pressing it again changes the delay time.

Each time the button is pressed, the delay time will increase by 5 ms.

15 ms → 20 ms → 25 ms → 30 ms

To calculate the delay time, refer to the calculation methods.

The standard setting is 20 ms.

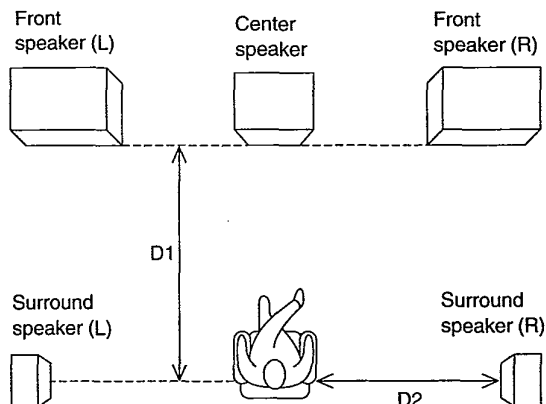

D1: Distance from front speakers


D2: Distance from surround speakers

If D1 is equal to or less than D2:

Set to 15 ms.

If D2 is less than D1:

Start at 15 ms and increase by 5 ms for every 1.5 m of difference between D1 and D2.

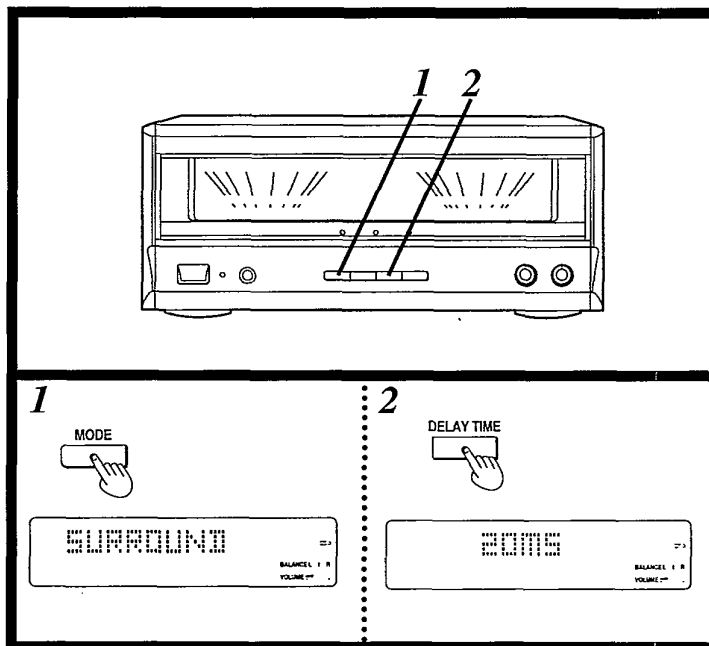

■ ENJOYING WITH SURROUND OR 3 STEREO

 
Before trying anything, have you set the center mode and adjusted speaker output level and adjusted the delay time?

When viewing a video, turn on the power supply for the TV and set the TV to video mode.

1 Press MODE to select "SURROUND" or "3 STEREO".

2 Press INPUT SELECTOR to select the desired external source.

Each time you press this button, sound sources will be switched as follows.



These indications correspond to terminals on the tuner's rear panel. Switch the displayed indication to the source you want to use.

Note

You can not enjoy SURROUND or 3 STEREO in the tuner mode.

3 Start the desired source.

To operate external sources, see the instruction manual provided with the specific unit.

Note


When employing SURROUND, use software recorded in Dolby Surround.

To turn off the DOLBY PRO LOGIC systems:

Press MODE to select "OFF".

Note

You cannot record acoustical effects produced in the SURROUND and 3 STEREO modes.

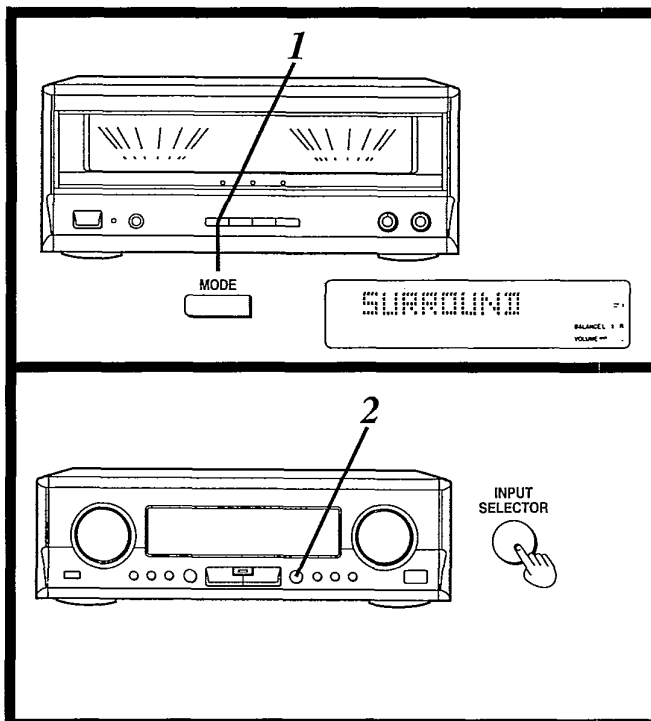

■ Operation Check and Main Component Replacement Procedures

NOTE


1. This section describes procedures for checking the operation of the major printed circuit boards and replacing the main components.
2. For reassembly after operation checks or replacement, reverse the respective procedures. Special reassembly procedures are described only when required.
3. Select items from the following index when checks or replacement are required.
4. Illustrated screws are equivalent to actual size.
5. Refer the parts No. on the page of "Main Component Replacement Procedures", if necessary.

● Contents


 


•Checking Procedures for each P.C.B.	Page.
1. Checking for the operation P.C.B.	13.
2. Checking for the main P.C.B.	14.
 •Main Component Replacement Procedures	
1. Replacement for the power IC and regulator transistor.	14,15.
2. Replacement for the meter unit.	15.


■ Checking Procedure for each P.C.B.

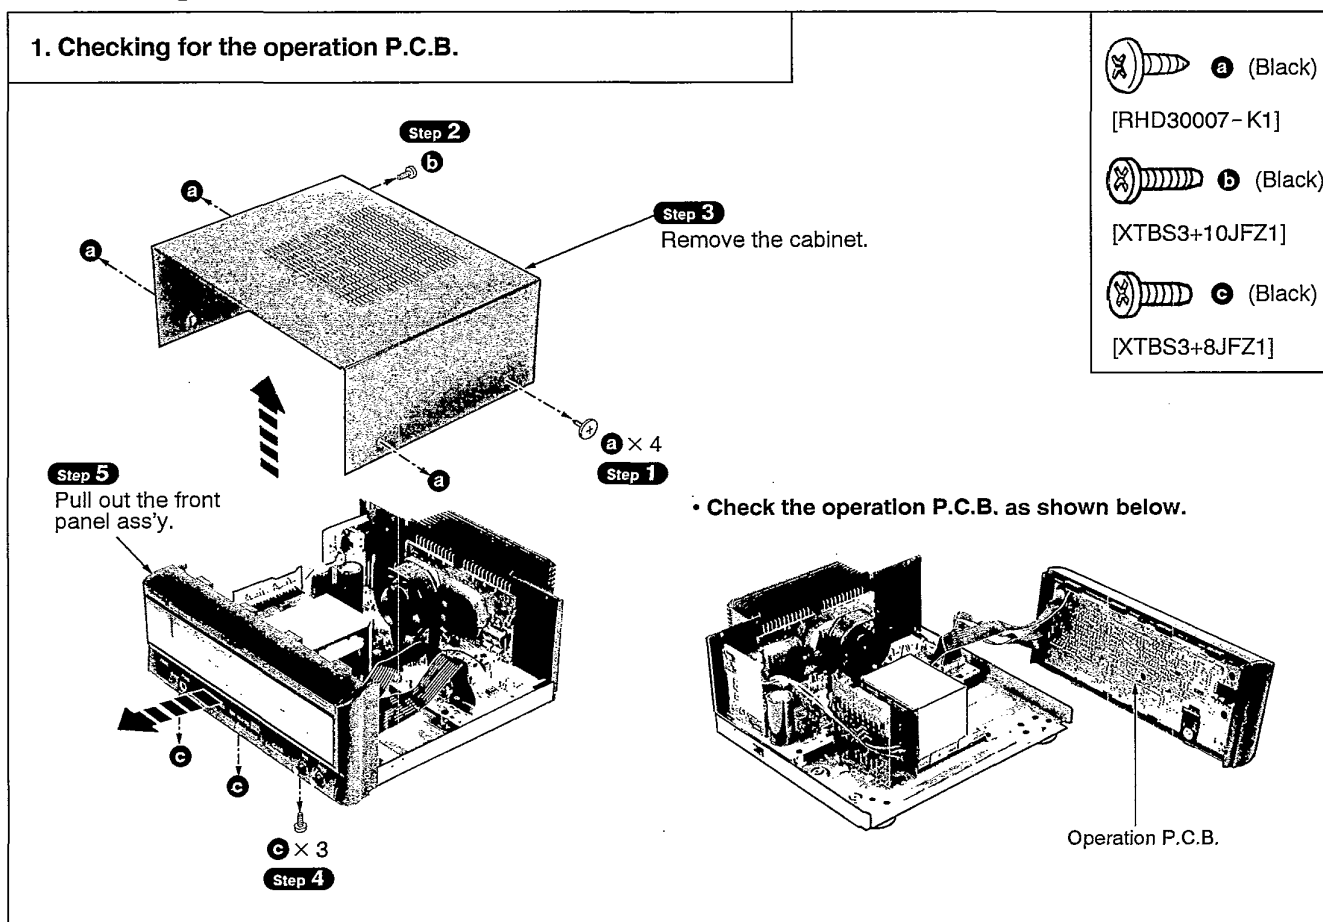1. Checking for the operation P.C.B.



2. Checking for the main P.C.B.


-  **a** (Black)
 [RHD30007 - K1]
 **b** (Black)
 [XTBS3+10JFZ1]
 **c**
 [XTB3+20JFZ] (Black)
 **d** (Black)
 [XTB3+10JFZ]

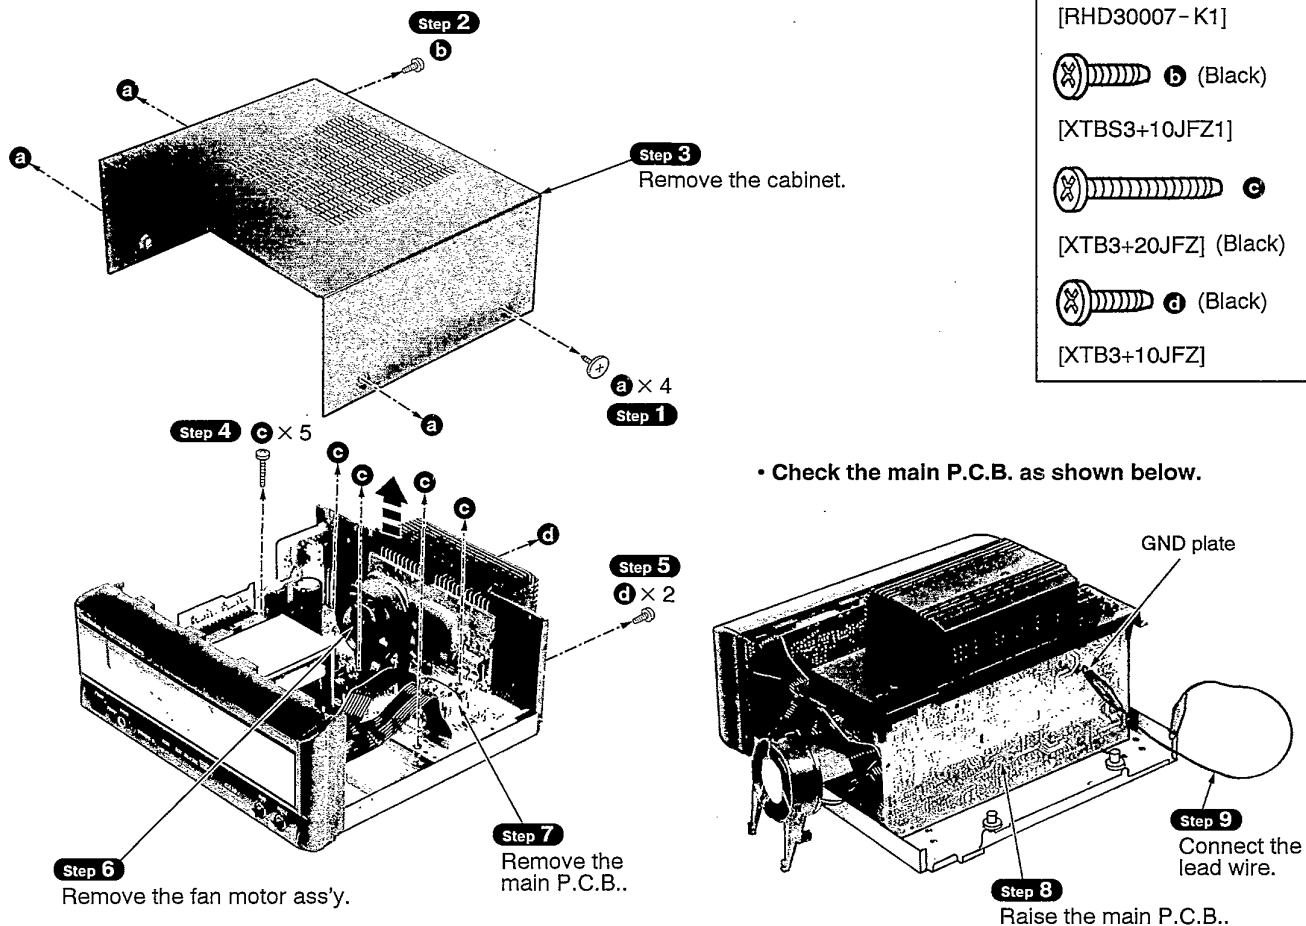


Main Component Replacement Procedures

1. Replacement for the power IC and regulator transistor

- Follow the item 2 (**Step 1** ~ **Step 7**) checking procedures for each P.C.B..

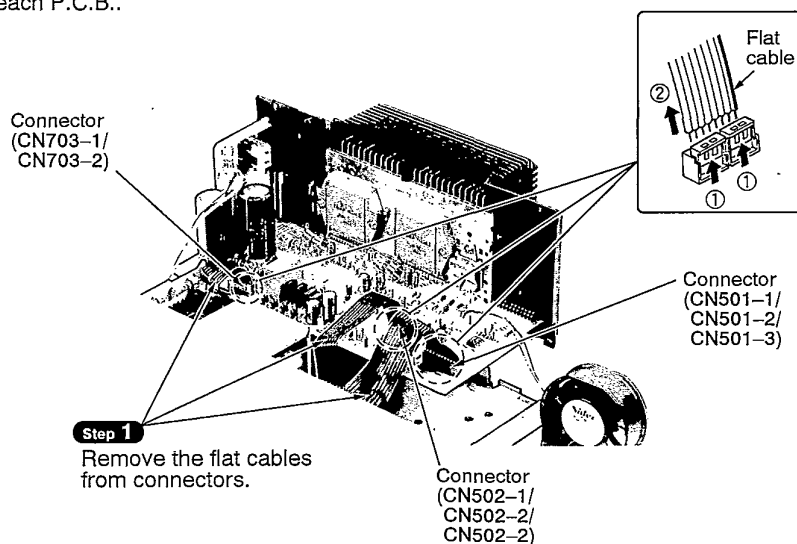

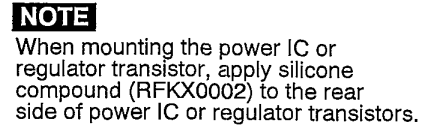

NOTE:
Take care not to lose the panel light when removing the operation P.C.B..

Step 2
Unsolder the terminals (4points).


a $\times 5$
Step 3


Step 4

Step 5
Remove the operation P.C.B..

Step 9
Remove the meter unit [RSE0007A].


Remove the angle.

 **a, c, d**
[XTBS26+8J]

 **b**
[RHD26016]

REPLACEMENT OF THE FOOT

1. Remove the 4 heat melted posts on the Bottom chassis ass'y with a pair of nippers or similar tool.
2. To replace the foot (RKA0011-3) on the bottom chassis ass'y melt the 4 posts with a soldering iron.

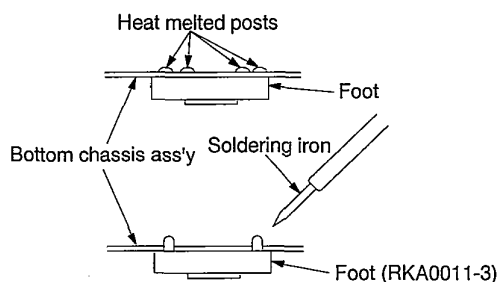


POWER SOURCE ON/OFF OF THIS UNIT

1. Connect this unit to an AC outlet by the AC power cord.
(This unit comes to stand-by mode.)
2. Short the test point **TP701** in Fig. 1.
This unit comes to power ON mode.

Operation check

1. Set this unit to power ON mode.
2. Input a signal (1kHz, 100mV), and confirm it to be outputted from the speaker terminal.

	INPUT	OUTPUT
Lch	J603-J308	Lch speaker terminal
Rch	J604-J308	Rch speaker terminal
Surround	J611-J308	Surround speaker terminal (To output a signal, both Lch and Rch should be connected.)
Center	J612-J308	Center speaker terminal

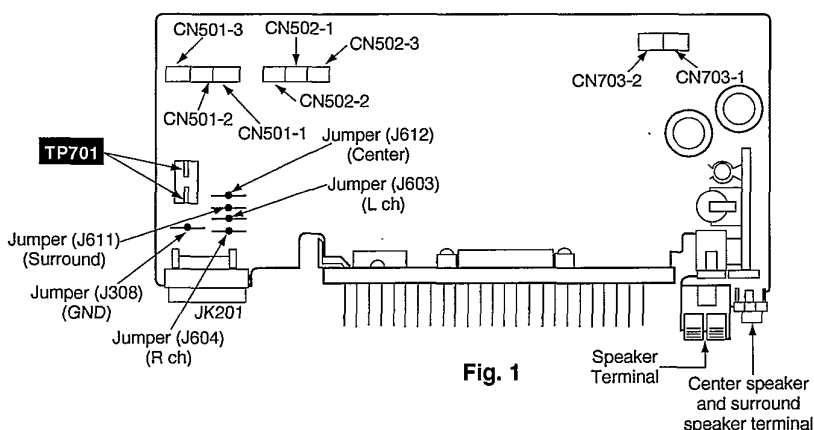

MEASUREMENTS AND ADJUSTMENTS

Caution: Before adjustment, be sure to connect this unit through the tuner (ST-CA10).

Control positions and equipment used.

- BASS, TREBLE knob Center
- Input selector (ST-CA10) AUX
- AF Oscillator
- AC electronic voltmeter (EVM)

• POWER METER ADJUSTMENT

1. Connect an AF oscillator and AC EVM to the amplifier, as shown in Fig. 1.
2. Set the power meter input level to 0 and confirm the meters on both amplifiers, L ch and R ch, show **-60dB**.
3. Turn on power to the unit and apply a **1kHz 50mV** signal from pin ③ (GND) to pin ④ (R ch) and pin ⑤ (L ch) of W501.
With this input level applied, check the AC EVM monitor are within the range of **±3mV**.
4. Adjust **VR808** (R ch) and **VR809** (L ch) so that the power meter indicates **1W**, as shown in Fig. 2.
5. Increase the input level by **10dB** and confirm that the power meter indicates **10W (±1.5W)**.
6. Set the input level back to 0 and check the meter indicators do not return to **-60dB** too quickly or unevenly.

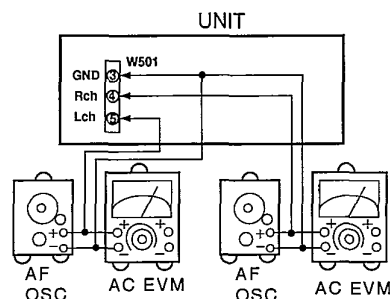


Fig. 1

POWER METER ADJ.

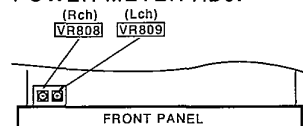





Fig. 2

■ SCHEMATIC DIAGRAM

● This schematic diagram may be modified at any time with the development of new technology.

	Page
A OPERATION CIRCUIT	18, 19
B HEADPHONES JACK	18
C MAIN CIRCUIT	20, 21
D POWER TRANSFORMER CIRCUIT [For (E, EB, EG, GN) areas]	21
[For (GC) area]	17
E AC IN TERMINAL CIRCUIT [For (E, EB, EG, GN) areas]	17
F VOLTAGE SELECTOR CIRCUIT [For (GC) area]	17






Notes:

- **S701:** Voltage adj. switch in "220V" position. (110V ↔ 127V ↔ 220V ↔ 240V) [For (GC) area only]
- **S801:** Power "STANDBY /ON" switch (POWER, STANDBY )
- **S802:** DOLBY PRO LOGIC mode select switch (MODE)
- **S803:** Test signal switch (TEST)
- **S804:** Delay time adjust switch (DELAY TIME)
- **S805:** Center mode select switch (CENTER MODE)
- Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.
No mark: Power ON
- Important safety notice:
Components identified by  mark have special characteristics important for safety.
Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.
When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.


- **Caution!**

IC and LSI are sensitive to static electricity.
Secondary trouble can be prevented by taking care during repair.
Cover the parts boxes made of plastics with aluminum foil.
Ground the soldering iron.
Put a conductive mat on the work table.
Do not touch the leads of IC or LSI with the fingers directly.


- **Voltage and signal line**

-  : Positive voltage line  : Negative voltage line
 : Source signal line (L-ch)
 : Surround speaker drive signal line
 : Center speaker drive signal line

Power Source For [GC] area. (P.C.Board: on page 24)

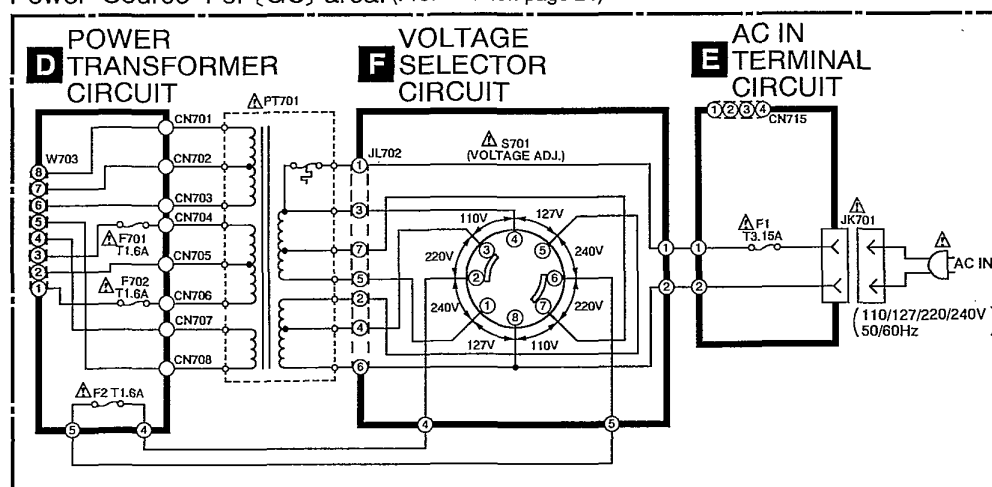



A OPERATION CIRCUIT (P.C.Board:on page 23)

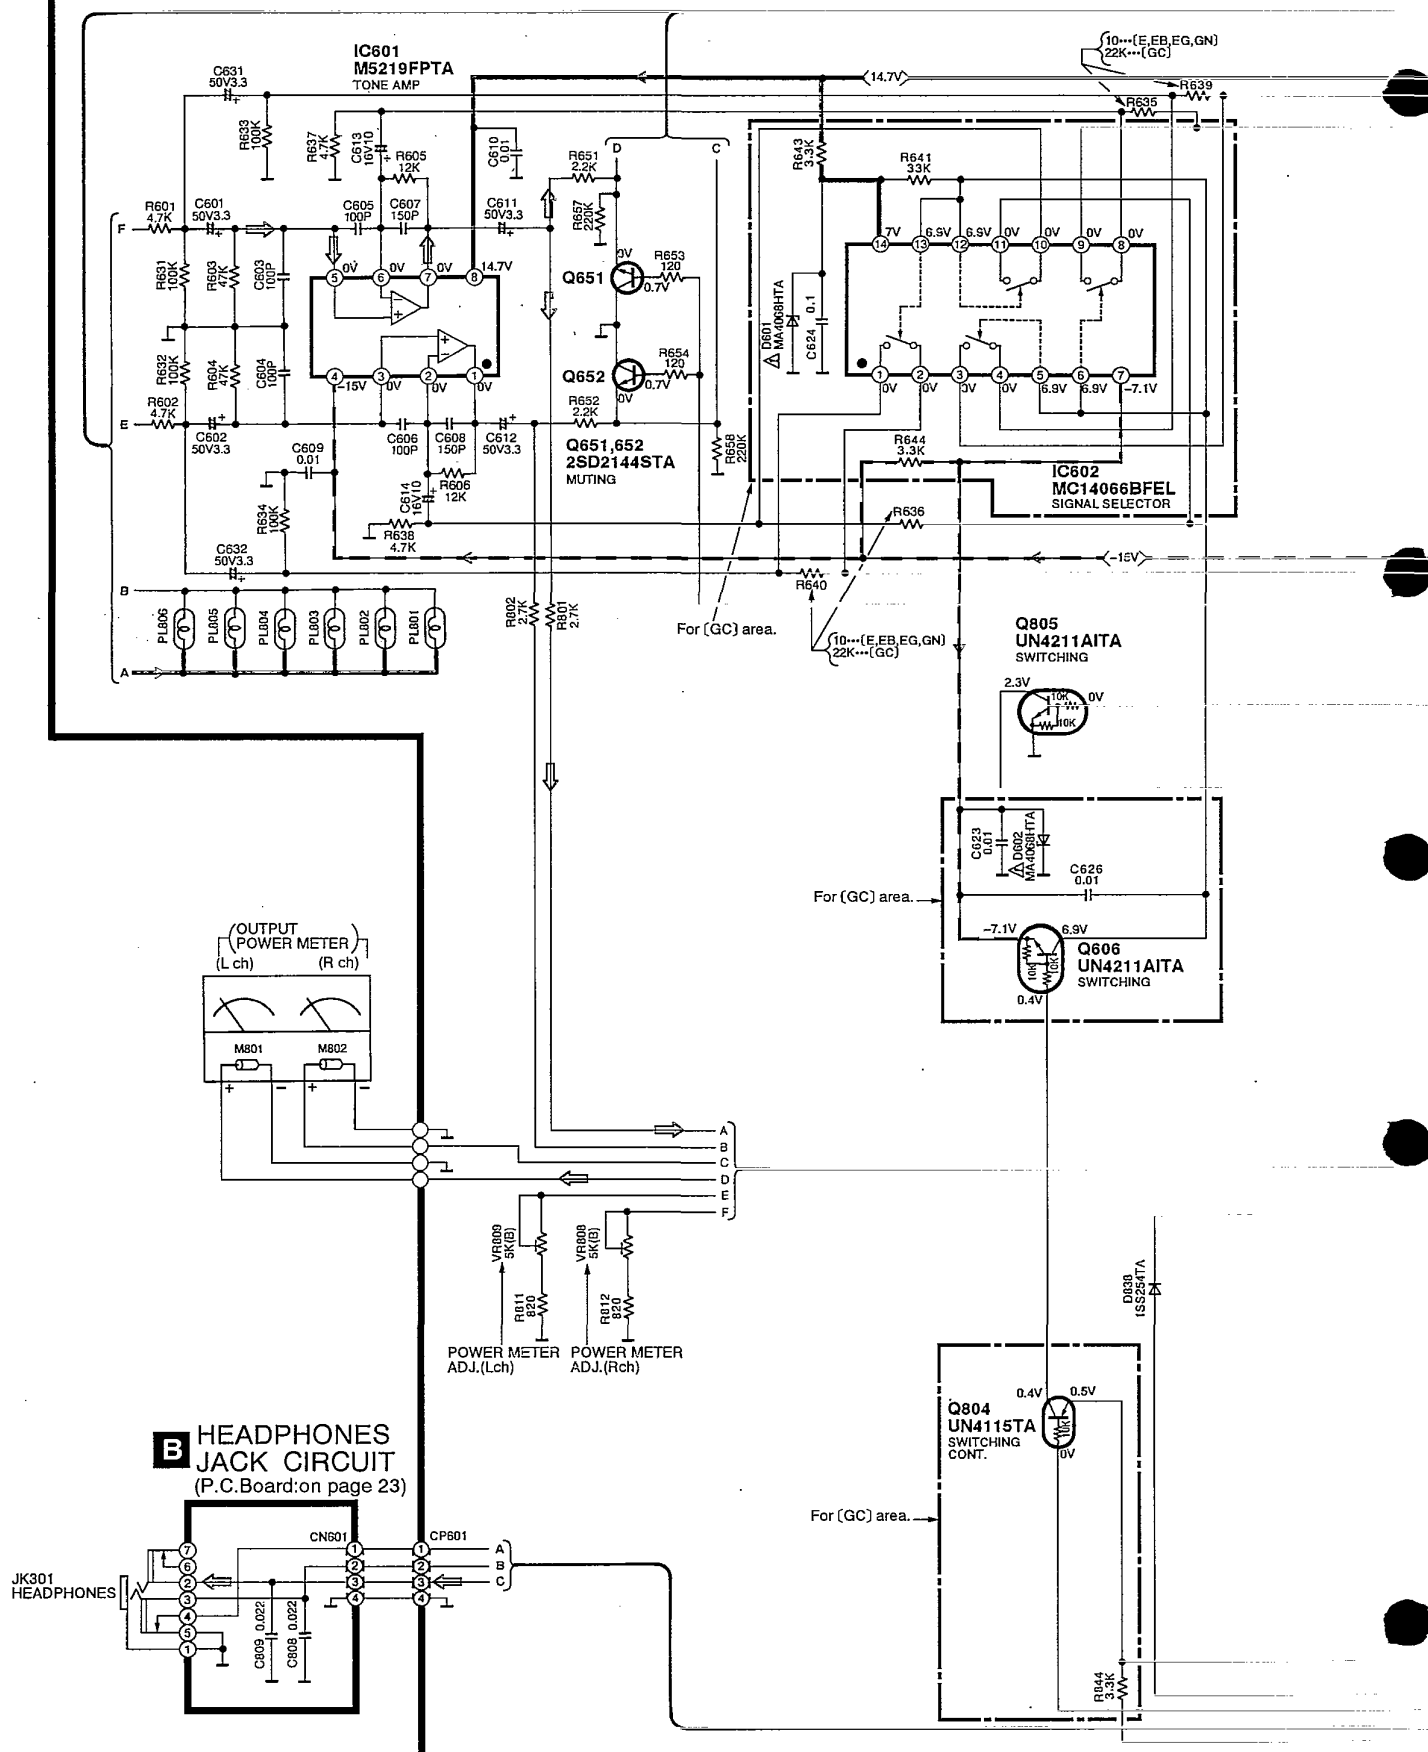




C MAIN CIRCUIT (P.C.Board: on page 22)

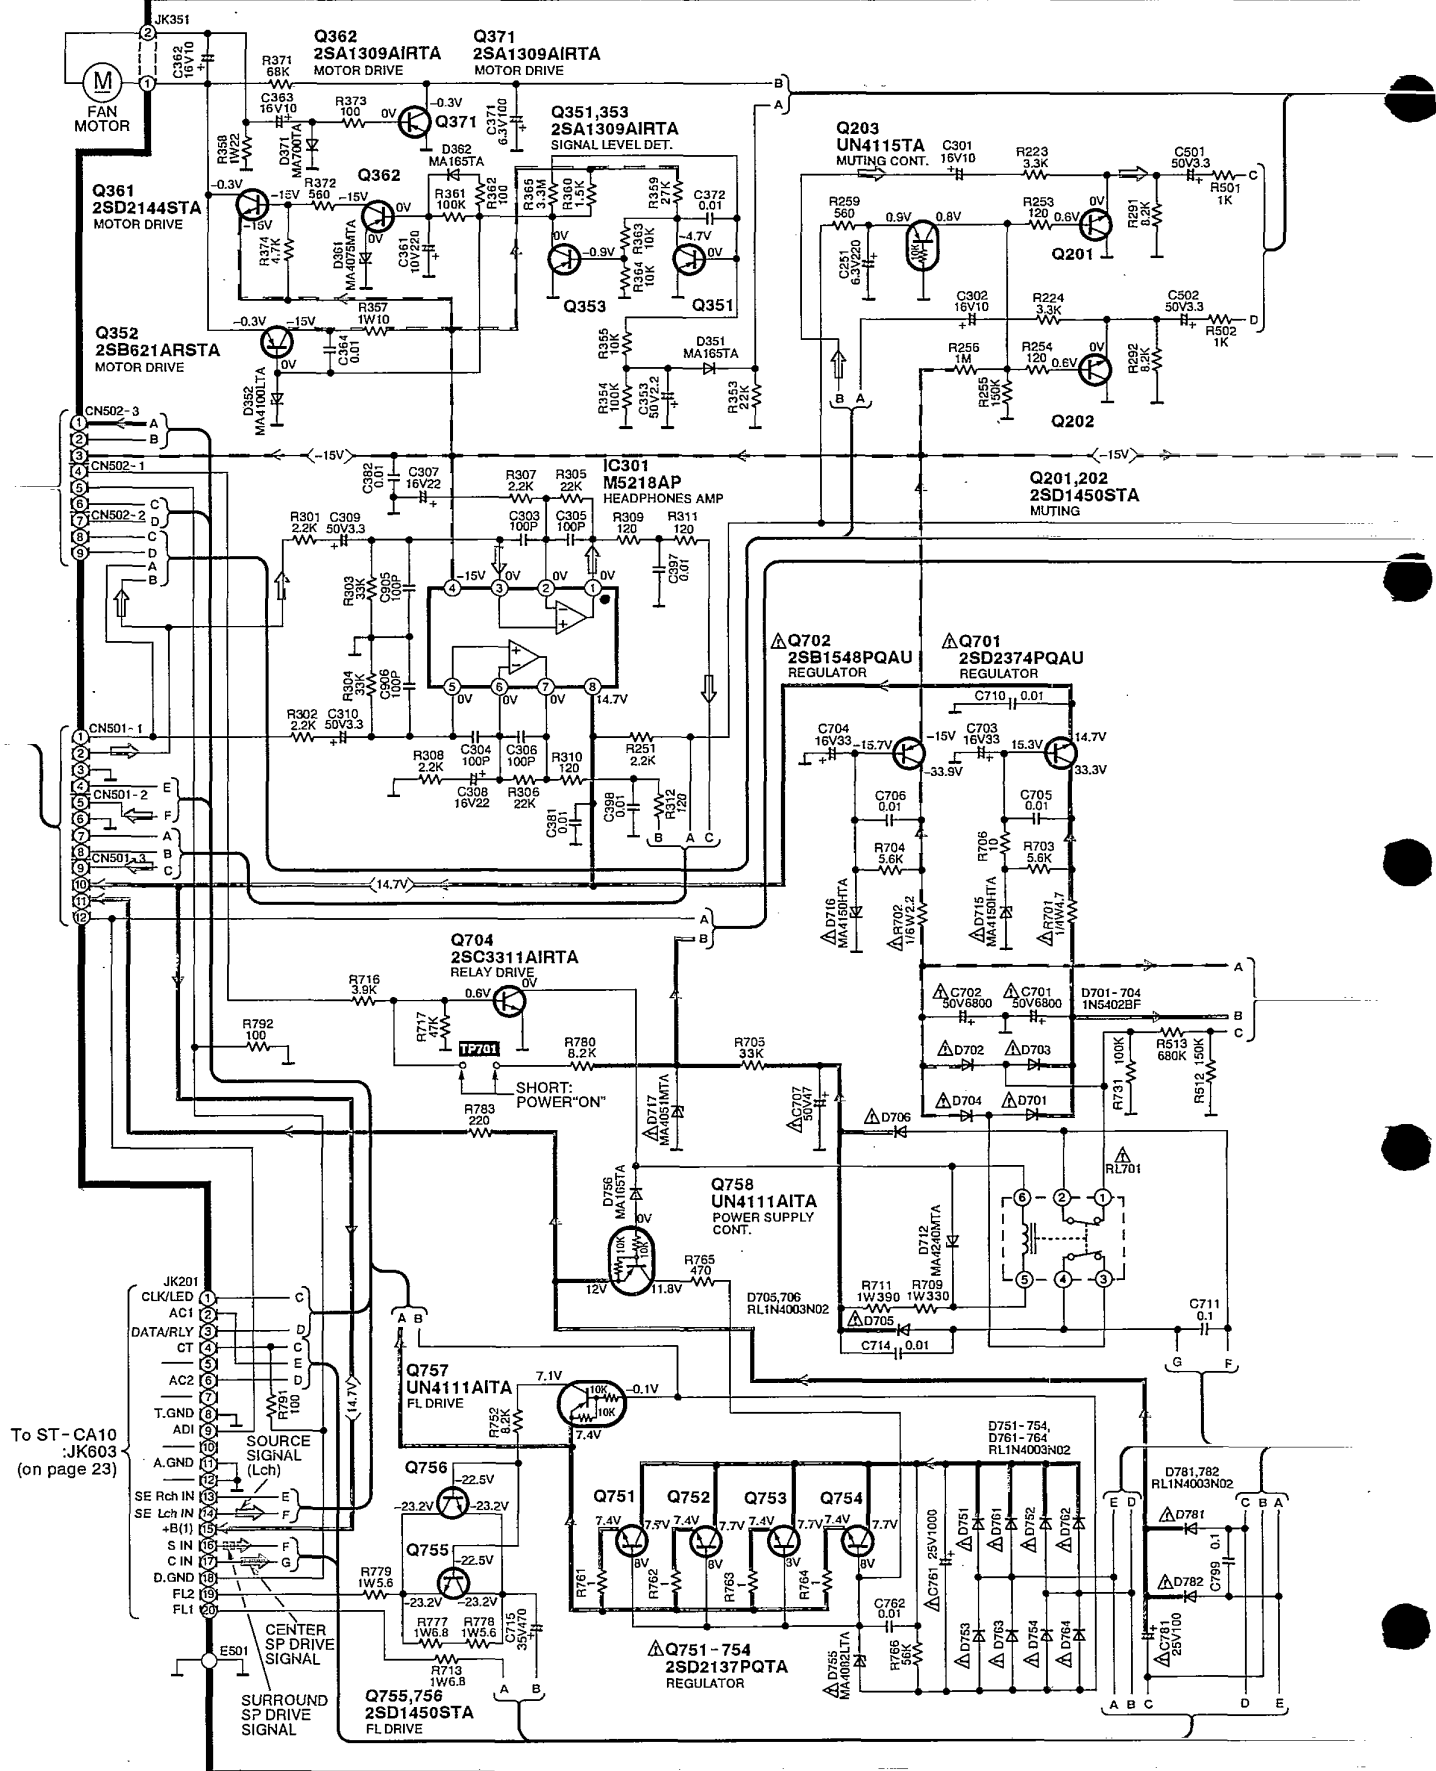

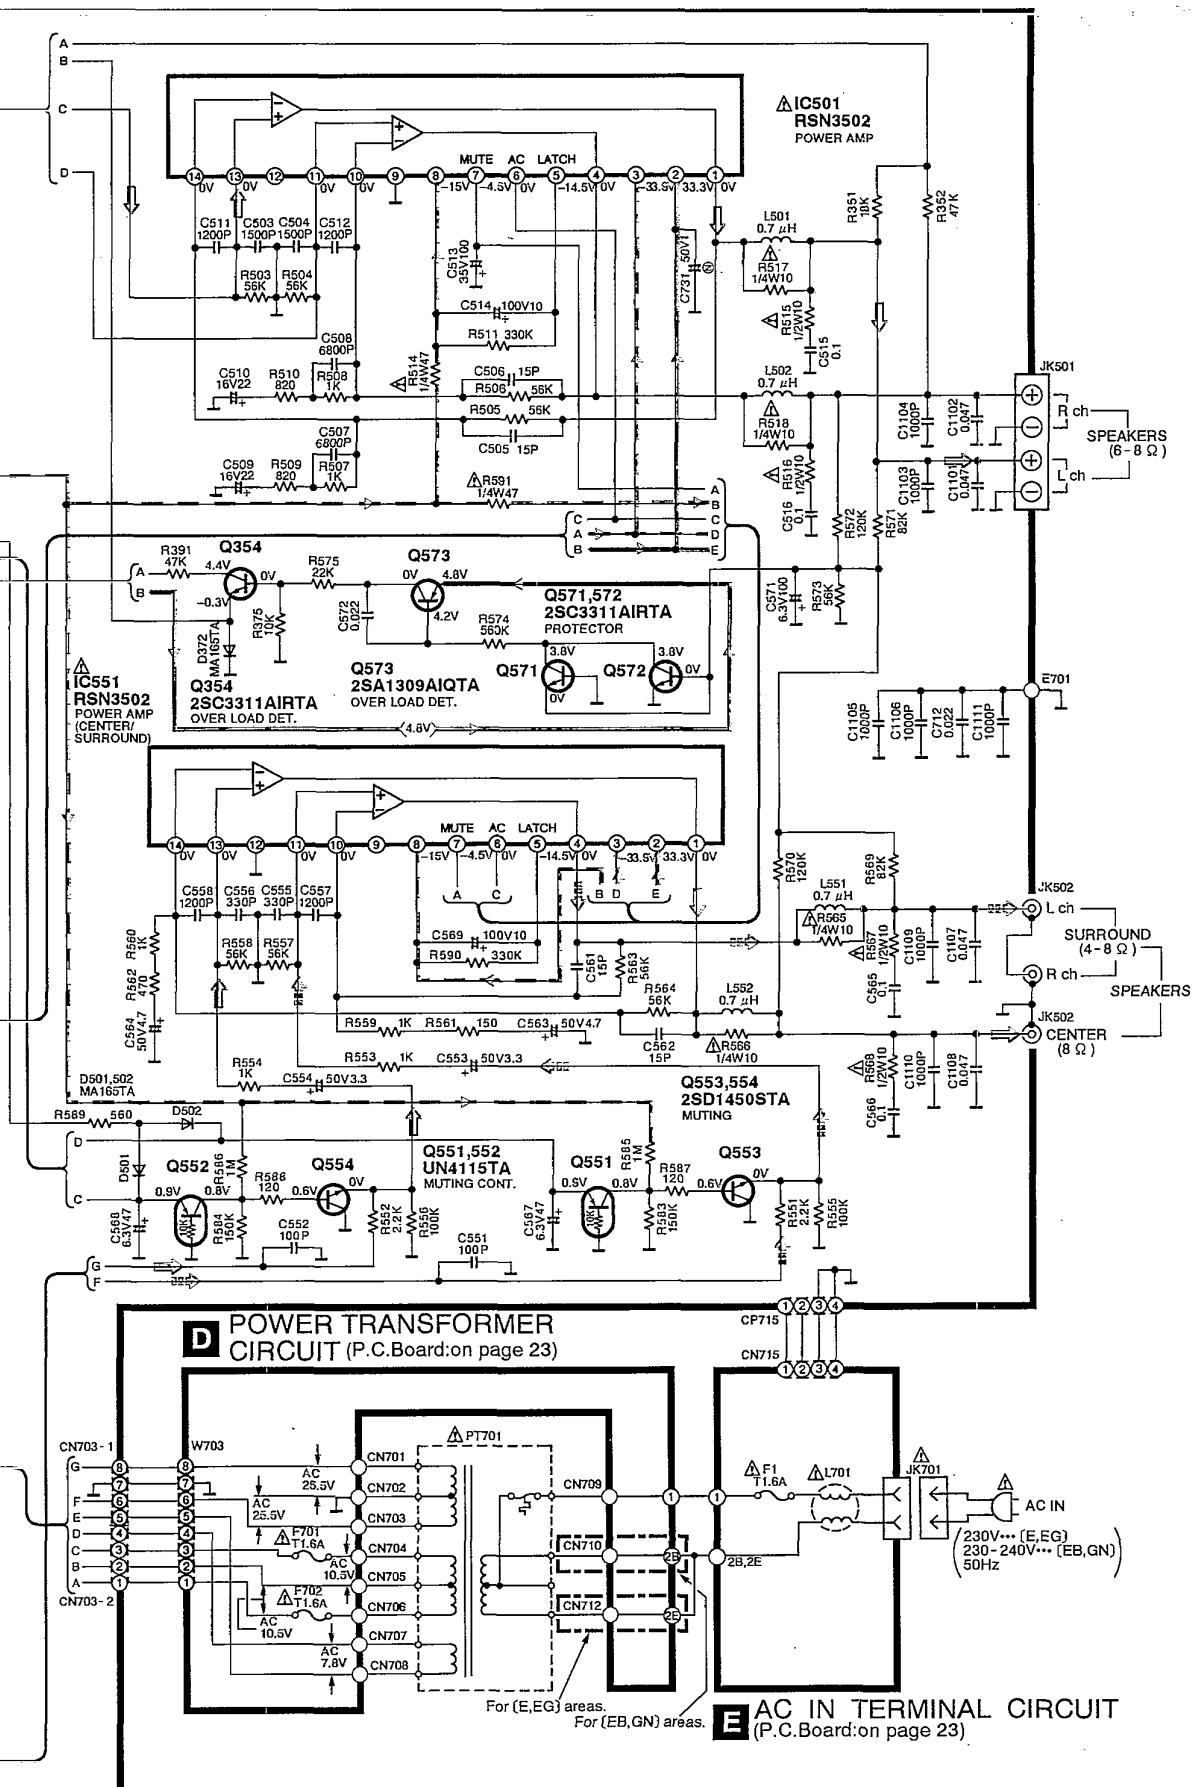


Power Source P.C.B. For [GC] area.


D POWER TRANSFORMER P.C.B. (REP2152B-P)

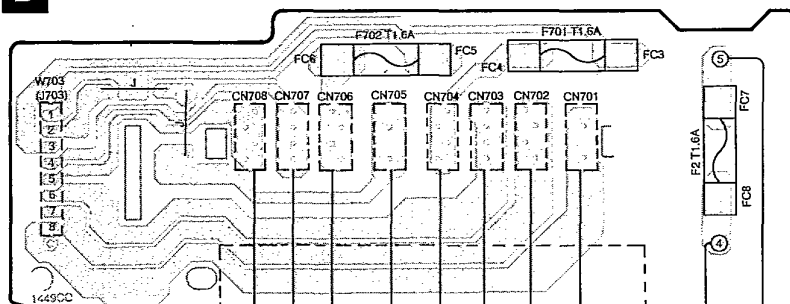

E AC IN
TERMINAL P.C.B.
(REP2152B-P)

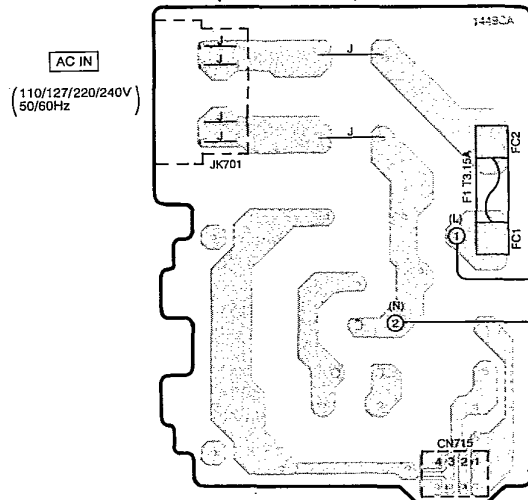

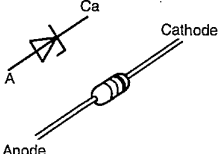
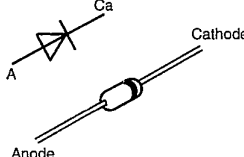
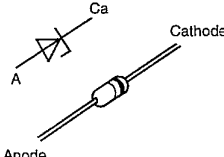
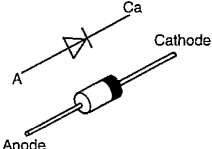


PT701
(Power
transformer)

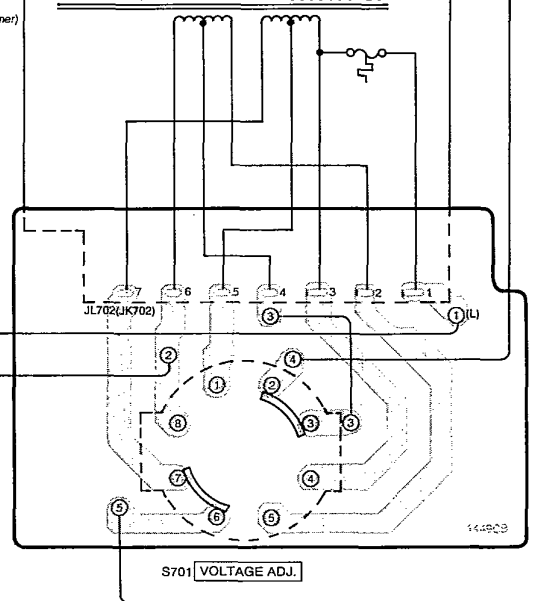


F VOLTAGE SELECTOR P.C.B.
(REP2152B-P)


• Terminal guide of IC's, transistors and diodes

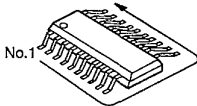	<table><tr><td>M5219FPTA</td><td>8PIN</td></tr><tr><td>MC14066BFEL</td><td>14PIN</td></tr><tr><td>BU2090F-E2</td><td>16PIN</td></tr></table>	M5219FPTA	8PIN	MC14066BFEL	14PIN	BU2090F-E2	16PIN	BA4558FDXT1	M5218AP	BA6138
M5219FPTA	8PIN									
MC14066BFEL	14PIN									
BU2090F-E2	16PIN									
RSN3502		2SA1309AIQTA 2SA1309AIRTA 2SC3311AIRTA 2SC3312RSTA 2SD1450STA UN4111AITA UN4115TA UN4211AITA	2SB621ARSTA	2SB1548PQAU 2SD2374PQAU	2SD2137PQTA					
2SD2144STA	2SD1862QSTV6		MA4051LTA MA4051MTA MA4056HTA MA4068HTA MA4075MTA MA4082LTA		1SS254TA MA165TA MA700TA					
	MA4100MTA MA4100LTA MA4150HTA MA4240MTA	SLR-305VC	1N5402BF RL1N4003N02							


■ WIRING CONNECTION DIAGRAM

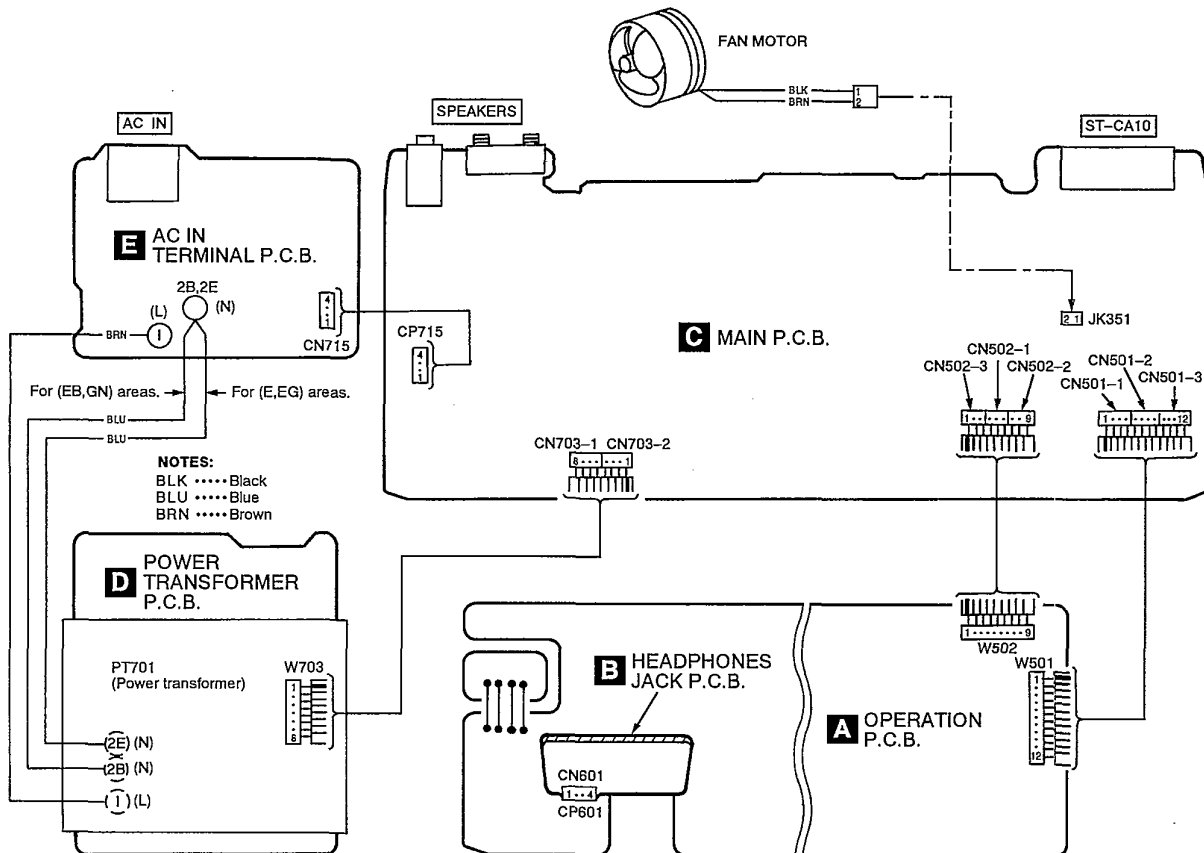


BLOCK DIAGRAM

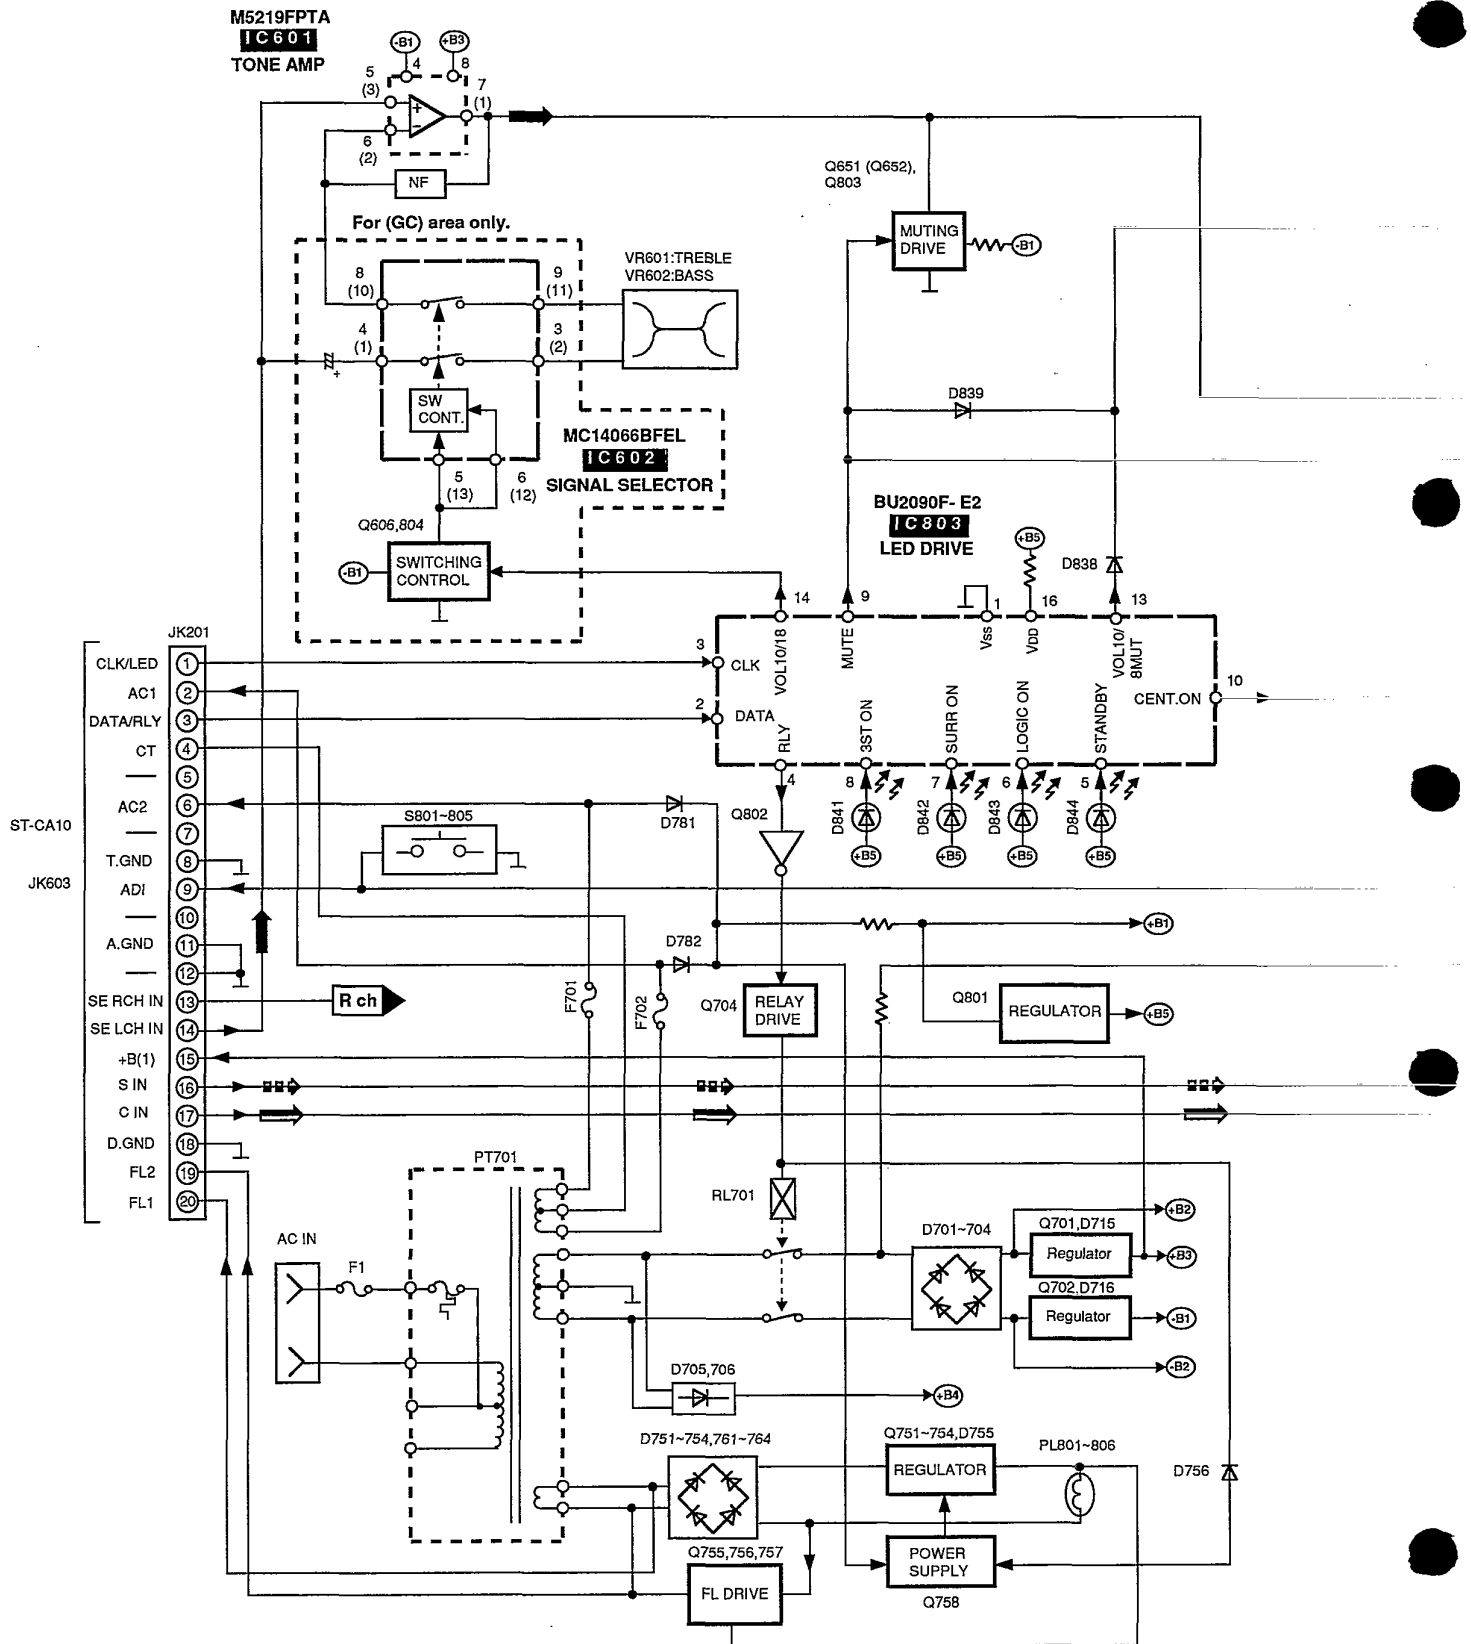

• Signal line ➡ : Source signal ⇨ : Surround speaker drive signal ➡ : Center speaker drive signal

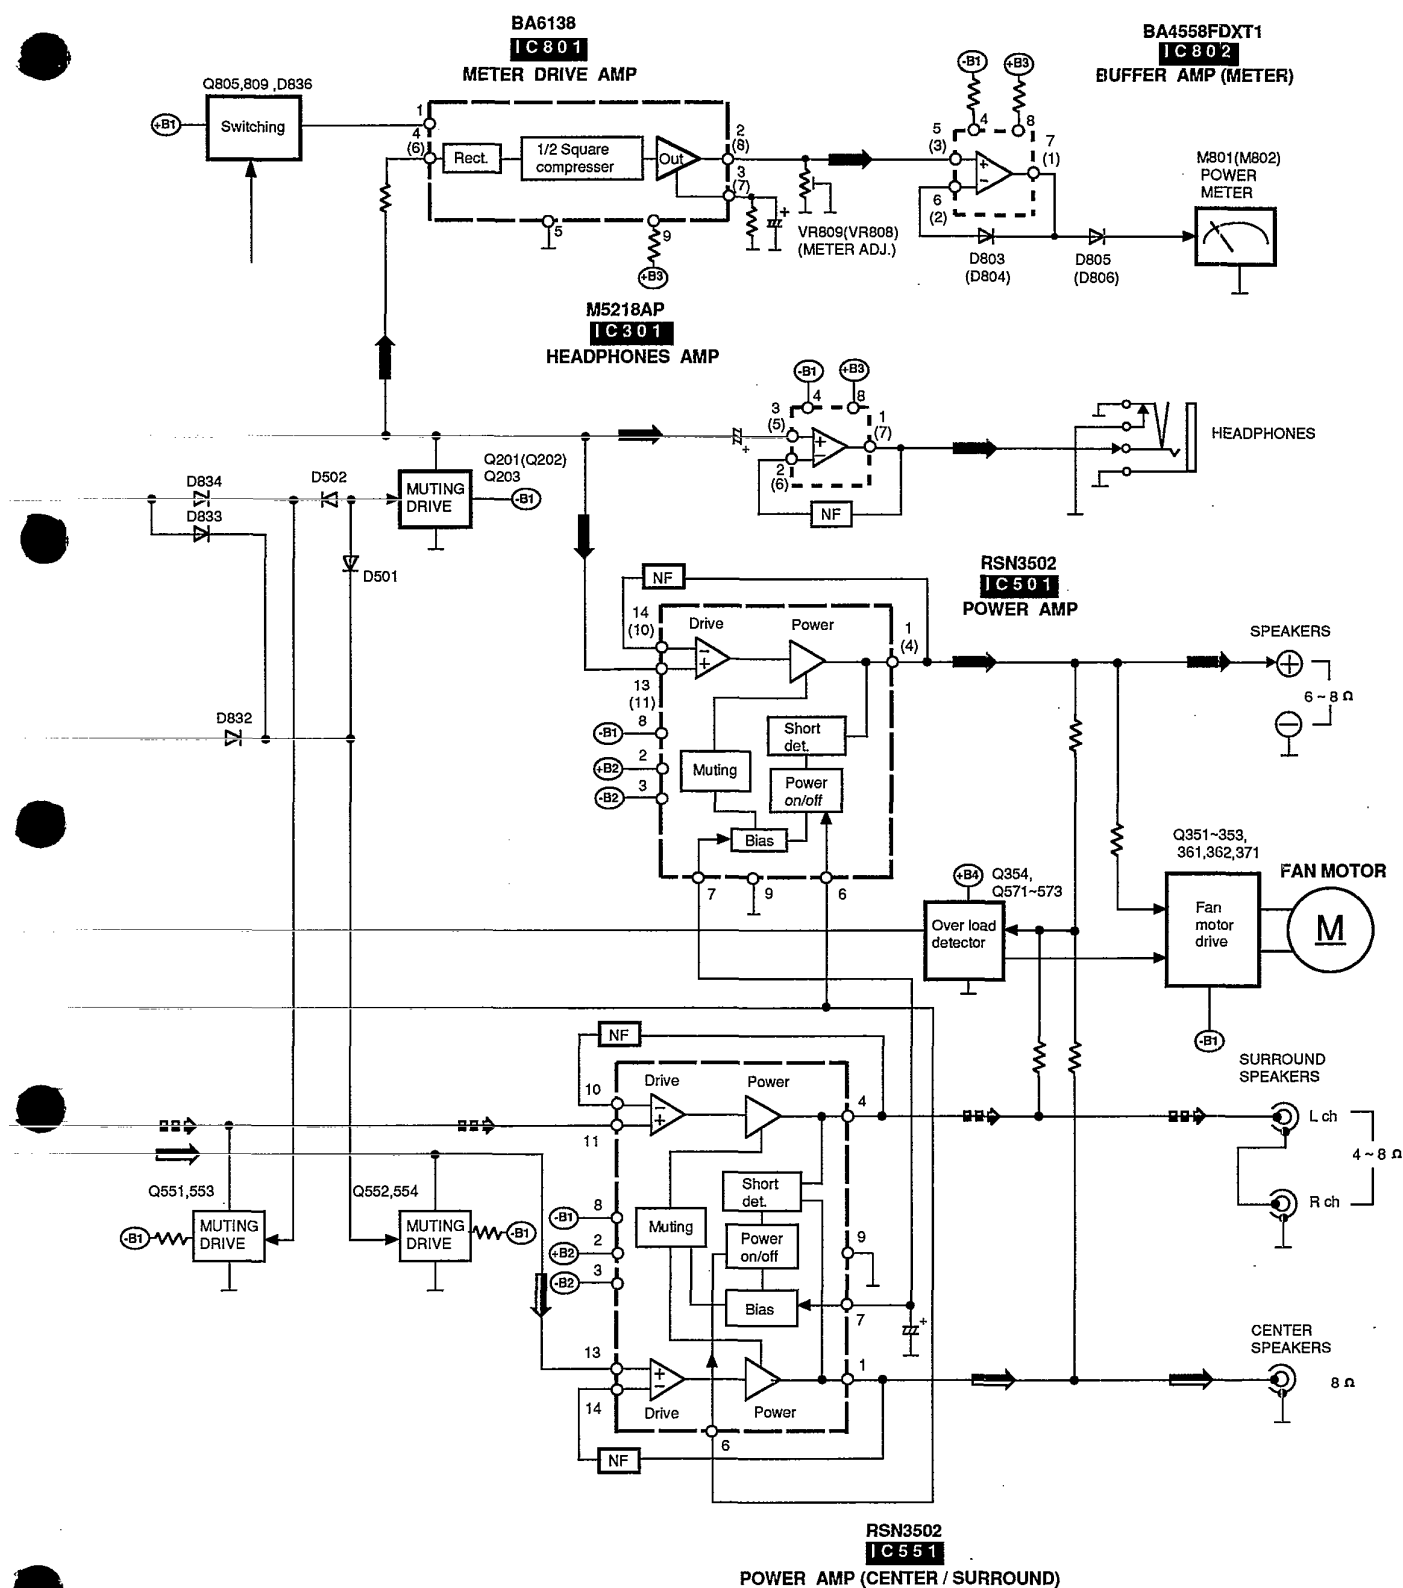

CABINET PARTS LOCATION

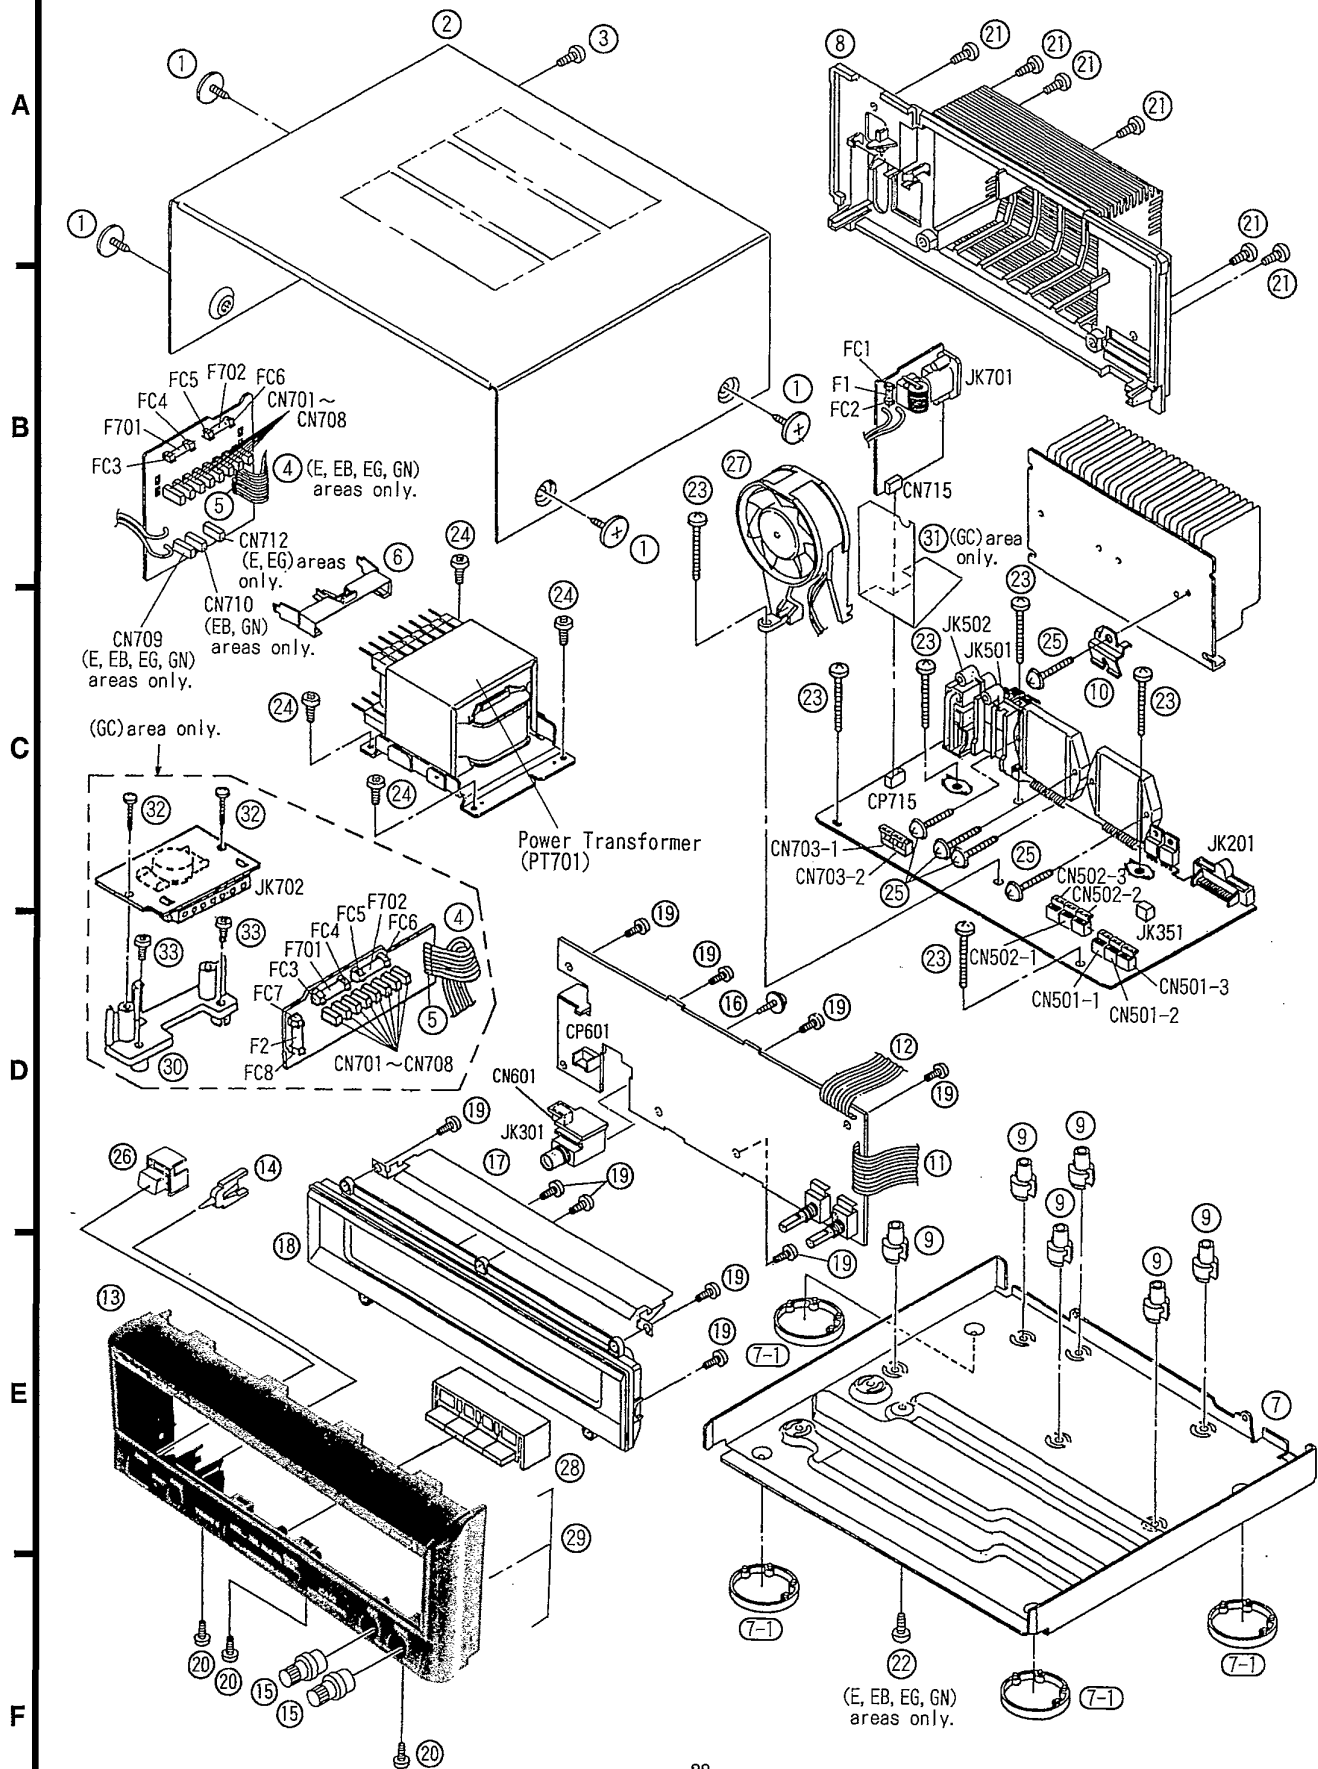

■ REPLACEMENT PARTS LIST

Ref. No.	Part No.	Part Name & Description	Remarks
D361	MA4075MTA	DIODE	
D362	MA165	DIODE	
D371	MA700TA	DIODE	
D372	MA165	DIODE	
D501, 502	MA165	DIODE	
D601, 602	MA4068HTA	DIODE	(GC) Δ
D701-704	1N5402BF	DIODE	Δ
D705, 706	RL1N4003N02	DIODE	Δ
D712	MA4240H	DIODE	
D715, 716	MA4150M	DIODE	Δ
D717	MA4051MTA	DIODE	Δ
D751-754	RL1N4003N02	DIODE	Δ
D755	MA4082LTA	DIODE	Δ
D756	MA165	DIODE	
D761-764	RL1N4003N02	DIODE	Δ
D781, 782	RL1N4003N02	DIODE	Δ
D802	MA4100MTA	DIODE	Δ
D803-806	ISS254TA	DIODE	
D807	MA4100MTA	DIODE	Δ
D831-834	ISS254TA	DIODE	
D836	MA4051-L	DIODE	
D837	MA4056HTA	DIODE	Δ
D838, 839	ISS254TA	DIODE	
D841-844	SLR-305VC	L. E. D.	
D861, 862	MA700TA	DIODE	
D863, 864	ISS254TA	DIODE	
		VARIABLE RESISTOR(S)	
VR601, 602	EVJYV1F03G24	TREBLE/BASS CONTROL	
VR808, 809	EVNDXAA00B53	POWER METER ADJ.	
		COIL (S)	
L501, 502	RLQYR73M	COIL	
L551, 552	RLQYR73M	COIL	
L701	RLQZ271M	COIL	(E, EB, EG, GN) Δ
		TRANSFORMER (S)	
PT701	RTP2N5B003	POWER TRANSFORMER	(E, EB, EG, GN) Δ
PT701	RTP1V5E004-W	POWER TRANSFORMER	(GC) Δ
		LAMP (S)	
PL801-806	XAMR137	LAMP	
		FUSE (S)	
F1	XBA2C16TB0	FUSE, 250V T1. 6A	(E, EB, EG, GN) Δ
F1	XBA2C31TB0	FUSE, 250V T3. 15A	(GC) Δ
F2	XBA2C16TB0	FUSE, 250V T1. 6A	(GC) Δ

Ref. No.	Part No.	Part Name & Description	Remarks
F701, 702	XBA2C16TB0	FUSE, 250V T1. 6A	Δ
		SWITCH(ES)	
S701	ESE37314	VOLTAGE ADJ.	(GC) Δ
S801	EVQ21405R	POWER	
S802	EVQ21405R	MODE	
S803	EVQ21405R	TEST	
S804	EVQ21405R	DELAY TIME	
S805	EVQ21405R	CENTER MODE	
		RELAY (S)	
RL701	RSY0013M-0	RELAY	Δ
		CONNECTOR(S) AND SOCKET	
CN601	RJU057W004	SOCKET (4P)	
CN701-708	RJS1A1101T1	CONNECTOR (1P)	
CN709	RJS1A1101T1	CONNECTOR (1P)	(E, EB, EG, GN)
CN710	RJS1A1101T1	CONNECTOR (1P)	(EB, GN)
CN712	RJS1A1101T1	CONNECTOR (1P)	(E, EG)
CN715	RJU057W004	SOCKET (4P)	
CN501-1-3	RJS1A6604	CONNECTOR (4P)	
CN502-1-3	RJS1A6603	CONNECTOR (3P)	
CN703-1, 2	RJS1A6604	CONNECTOR (4P)	
CP601	RJT057W004-1	CONNECTOR (4P)	
CP715	RJT057W004-1	CONNECTOR (4P)	
JK201	RJT065K20	CONNECTOR (20P)	
JK351	SJT3213	CONNECTOR (2P)	
JK702	SJS702-2	CONNECTOR (7P)	(GC)
		JACK(S) AND TERMINAL (S)	
JK301	RJJ67TA02	HEADPHONES	
JK501	RJR0054	SPEAKER (MAIN)	
JK502	RJH2301MS	SPEAKER (CENTER/SURROUND)	
JK701	SJS9236	AC INLET	(E, EB, EG, GC) Δ
JK701	SJSD16-1	AC INLET	(GN) Δ
		EARTH PLATE (S)	
E501	SNE1004-2	EARTH PLATE	
E701	SNE1004-2	EARTH PLATE	
		FUSE HOLDER(S)	
FC1-6	EYF52BC	FUSE HOLDER	
FC7, 8	EYF52BC	FUSE HOLDER	(GC)

RESISTORS AND CAPACITORS

Notes: * Capacity values are in microfarads (uF) unless specified otherwise, P=Pico-farads (pF) F=Farads (F)
* Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM), 1M=1,000k (OHM)

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
		RESISTORS						
R223, 224	ERDS2TJ332	1/4W 3. 3K	R561	ERDS2TJ151	1/4W 150	R717	ERDS2TJ473	1/4W 47K
R251	ERDS2TJ222	1/4W 2. 2K	R562	ERDS2TJ471	1/4W 470	R731	ERDS2TJ104	1/4W 100K
R253, 254	ERDS2EJ121	1/4W 120	R563, 564	ERDS2TJ563	1/4W 56K	R752	ERDS2TJ822	1/4W 8. 2K
R255	ERDS2TJ154	1/4W 150K	R565, 566	ERD25FVJ100T	1/4W 10 Δ	R761-764	ERDS2TJ1R0	1/4W 1. 0
R256	ERDS2TJ105T	1/4W 1M	R567, 568	ERDS1FVJ100T	1/2W 10 Δ	R765	ERDS2TJ471	1/4W 470
R259	ERDS2TJ561	1/4W 560	R569	ERDS2TJ823T	1/4W 82K	R766	ERDS2TJ563	1/4W 56K
R291, 292	ERDS2TJ822	1/4W 8. 2K	R570	ERDS2TJ124T	1/4W 120K	R777	ERX1SJ6R8E	1W 6. 8
R301, 302	ERDS2TJ222	1/4W 2. 2K	R571	ERDS2TJ823T	1/4W 82K	R778, 779	ERX1SJ5R6E	1W 5. 6
R303, 304	ERDS2TJ333	1/4W 33K	R572	ERDS2TJ124T	1/4W 120K	R780	ERDS2TJ822	1/4W 8. 2K
R305, 306	ERDS2TJ223	1/4W 22K	R573	ERDS2TJ563	1/4W 56K	R783	ERDS2TJ221	1/4W 220
R307, 308	ERDS2TJ222	1/4W 2. 2K	R574	ERDS2TJ564	1/4W 560K	R791, 792	ERDS2TJ101	1/4W 100
R309-312	ERDS2EJ121	1/4W 120	R575	ERDS2TJ223	1/4W 22K	R801, 802	ERDS2TJ272T	1/4W 2. 7K
R351	ERDS2TJ183T	1/4W 18K	R583, 584	ERDS2TJ154	1/4W 150K	R803, 804	ERDS2TJ104	1/4W 100K
R352	ERDS2TJ473	1/4W 47K	R585, 586	ERDS2TJ105T	1/4W 1M	R805, 806	ERDS2TJ155	1/4W 1. 5M
R353	ERDS2TJ223	1/4W 22K	R587, 588	ERDS2EJ121	1/4W 120	R807, 808	ERDS2TJ331	1/4W 330
R354	ERDS2TJ104	1/4W 100K	R589	ERDS2TJ561	1/4W 560	R811, 812	ERDS2TJ821	1/4W 820
R355	ERDS2TJ103	1/4W 10K	R590	ERDS2TJ334	1/4W 330K	R816	ERDS2TJ104	1/4W 100K
R357	ERG1SJ100E	1W 10	R591	ERD2FCVG470T	1/4W 47 Δ	R817, 818	ERDS2TJ221	1/4W 220
R358	ERG1SJ220E	1W 22	R601, 602	ERDS2TJ472	1/4W 4. 7K	R819	ERDS2TJ104	1/4W 100K
R359	ERDS2TJ273	1/4W 27K	R603, 604	ERDS2TJ473	1/4W 47K	R821, 822	ERDS2TJ123	1/4W 12K
R360	ERDS2TJ152	1/4W 1. 5K	R605, 606	ERDS2TJ123	1/4W 12K	R823, 824	ERDS2TJ154	1/4W 150K
R361	ERDS2TJ104	1/4W 100K	R607, 608	ERDS2TJ222	1/4W 2. 2K	R825, 826	ERDS2TJ223	1/4W 22K
R362	ERDS2TJ101	1/4W 100	R609, 610	ERDS2TJ821	1/4W 820	R827, 828	ERDS2TJ102	1/4W 1K
R363, 364	ERDS2TJ103	1/4W 10K	R611, 612	ERDS2TJ122	1/4W 1. 2K	R829	ERDS2TJ222	1/4W 2. 2K
R365	ERDS2TJ335T	1/4W 3. 3M	R613, 614	ERDS2TJ683	1/4W 68K	R831	ERDS2TJ821	1/4W 820
R371	ERDS2TJ683	1/4W 68K	R615, 616	ERDS2TJ123	1/4W 12K	R832	ERDS2TJ102	1/4W 1K
R372	ERDS2TJ561	1/4W 560	R625, 626	ERDS2TJ183T	1/4W 18K	R833	ERDS2TJ122	1/4W 1. 2K
R373	ERDS2TJ101	1/4W 100	R627, 628	ERDS2TJ123	1/4W 12K	R834	ERDS2TJ152	1/4W 1. 5K
R374	ERDS2TJ472	1/4W 4. 7K	R631-634	ERDS2TJ104	1/4W 100K	R836, 837	ERDS2TJ472	1/4W 4. 7K
R375	ERDS2TJ103	1/4W 10K	R635, 636	ERDS2TJ100	1/4W 10 E, EB, EG, GN	R838	ERDS2TJ332	1/4W 3. 3K
R391	ERDS2TJ473	1/4W 47K	R635, 636	ERDS2TJ223	1/4W 22K GC	R841, 842	ERDS2TJ332	1/4W 3. 3K
R501, 502	ERDS2TJ102	1/4W 1K	R637, 638	ERDS2TJ472	1/4W 4. 7K	R843	ERDS2TJ102	1/4W 1K
R503-506	ERDS2TJ563	1/4W 56K	R639, 640	ERDS2TJ100	1/4W 10 E, EB, EG, GN	R844	ERDS2TJ332	1/4W 3. 3K GC
R507, 508	ERDS2TJ102	1/4W 1K	R639, 640	ERDS2TJ223	1/4W 22K GC	R845, 846	ERDS2TJ102	1/4W 1K
R509, 510	ERDS2TJ821	1/4W 820	R641	ERDS2TJ333	1/4W 33K GC	R847	ERDS2TJ221	1/4W 220
R511	ERDS2TJ334	1/4W 330K	R643, 644	ERDS2TJ332	1/4W 3. 3K GC	R848	ERDS2TJ104	1/4W 100K
R512	ERDS2TJ154	1/4W 150K	R651, 652	ERDS2TJ222	1/4W 2. 2K	R849, 850	ERDS2TJ102	1/4W 1K
R513	ERDS2TJ684	1/4W 680K	R653, 654	ERDS2EJ121	1/4W 120	R851	ERDS2TJ331	1/4W 330
R514	ERD25FJ470	1/4W 47 Δ	R655	ERDS2TJ561	1/4W 560	R852	ERDS2TJ391	1/4W 390
R515, 516	ERDS1FVJ100T	1/2W 10 Δ	R657, 658	ERDS2TJ224T	1/4W 220K	R853	ERDS2TJ392T	1/4W 3. 9K
R517, 518	ERD25FVJ100T	1/4W 10 Δ	R701	ERD2FCVJ4R7T	1/4W 4. 7 Δ	R855, 856	ERDS2TJ393	1/4W 39K
R551, 552	ERDS2TJ222	1/4W 2. 2K	R702	ERQ16NkW2R2E	1/6W 2. 2 Δ	R857, 858	ERDS2TJ331	1/4W 330
R553, 554	ERDS2TJ102	1/4W 1K	R703, 704	ERDS2TJ562	1/4W 5. 6K	R861, 862	ERDS2TJ681	1/4W 680
R555, 556	ERDS2TJ104	1/4W 100K	R705	ERDS2TJ333	1/4W 33K	R863	ERDS2TJ222	1/4W 2. 2K
R557, 558	ERDS2TJ563	1/4W 56K	R706	ERDS2TJ100	1/4W 10	R864, 865	ERDS2TJ221	1/4W 220
R559, 560	ERDS2TJ102	1/4W 1K	R709	ERG1SJ331E	1W 330	R870	ERDS2TJ222	1/4W 2. 2K
			R711	ERG1SJ391E	1W 390	R871, 872	ERDS2TJ272T	1/4W 2. 7K
			R713	ERX1SJ6R8E	1W 6. 8	R879	ERDS2TJ221	1/4W 220
			R716	ERDS2TJ392T	1/4W 3. 9K	R885, 886	ERDS2EJ121	1/4W 120

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
R887, 888	ERDS2TJ152	1/4W 1.5K	C553, 554	RCE1HKA3R3BG	50V 3.3U	C710	ECBT1E103ZF	25V 0.01U
			C555, 556	ECBT1H331KB5	50V 330P	C711	ECQE1104KF3	100V 0.1U
		CAPACITORS	C557, 558	ECBT1C122KR5	16V 1200P	C712	ECBT1E223ZF	25V 0.022U
			C561, 562	ECBT1H150J5	50V 15P	C714	ECKR1H103ZF5	50V 0.01U
C251	RCE0JKA221BV	6.3V 220U	C563, 564	RCE1HKA4R7BG	50V 4.7U	C715	ECA1VHG471B	35V 470U
C301, 302	RCE1CKA100BG	16V 10U	C565, 566	ECFR1H104ZF	50V 0.1U	C731	ECEA1HKN010B	50V 1U
C303-306	ECBT1H101KB5	50V 100P	C567, 568	RCE0JKA470BG	6.3V 47U	C761	ECA1EM102B	25V 1000U Δ
C307, 308	RCE1CKA220BG	16V 22U	C569	ECA2AAP100B	100V 10U	C762	ECBT1E103ZF	25V 0.01U
C309, 310	RCE1HKA3R3BG	50V 3.3U	C571	RCE0JKA101BV	6.3V 100U	C781	ECA1EM101B	25V 100U Δ
C353	ECEA1HKA2R2B	50V 2.2U	C572	ECBT1E223ZF	25V 0.022U	C799	ECBT1H104ZF5	50V 0.1U
C361	ECEA1KA221B	10V 220U	C601, 602	RCE1HKA3R3BG	50V 3.3U	C801, 802	ECEA1EKN3R3B	25V 3.3U
C362, 363	RCE1CKA100BG	16V 10U	C603-606	ECBT1H101KB5	50V 100P	C803, 804	ECEA1HKA2R2B	50V 2.2U
C364	ECBT1E103ZF	25V 0.01U	C607, 608	ECBT1H151KB5	50V 150P	C805	RCE1HKA4R7BG	50V 4.7U
C371	RCE0JKA101BV	6.3V 100U	C609, 610	ECBT1E103ZF	25V 0.01U	C806	RCE0JKA221BV	6.3V 220U
C372	ECBT1E103ZF	25V 0.01U	C611, 612	RCE1HKA3R3BG	50V 3.3U	C808, 809	ECBT1E223ZF	25V 0.022U
C381, 382	ECBT1E103ZF	25V 0.01U	C613, 614	RCE1CKA100BG	16V 10U	C810	RCE1HKA4R7BG	50V 4.7U
C397, 398	ECBT1E103ZF	25V 0.01U	C615, 616	ECEA1HKA010B	50V 1U	C831	RCE1CKA100BG	16V 10U
C501, 502	ECA1HAP3R3B	50V 3.3U	C617, 618	ECQV1H823JM3	50V 0.082U	C832	ECBT1E103ZF	25V 0.01U
C503, 504	ECBT1C152KR5	16V 1500P	C623, 624	ECBT1E103ZF	25V 0.01U GC	C833	ECBT1H104ZF5	50V 0.1U
C505, 506	ECBT1H150J5	50V 15P	C626	ECBT1E103ZF	25V 0.01U GC	C834, 835	ECBT1H471KB5	50V 470P
C507, 508	ECBT1C682KR5	16V 6800P	C631, 632	RCE1HKA3R3BG	50V 3.3U	C836, 837	RCE1HKA3R3BG	50V 3.3U
C509, 510	RCE1CKA220BG	16V 22U	C633, 634	ECBT1C822KS5	16V 8200P	C855, 856	ECBT1C682KR5	16V 6800P
C511, 512	ECBT1C122KR5	16V 1200P	C653	RCE1CKA101BV	16V 100U	C905, 906	ECBT1H101KB5	50V 100P
C513	ECA1VM101B	35V 100U	C701, 702	ECES1H682VNG	50V 6800U Δ	C1101, 1102	ECBT1H473ZF5	50V 0.047U
C514	ECA2AAP100B	100V 10U	C703, 704	ECEA1CKA330B	16V 33U	C1103-1106	ECBT1H102KB5	50V 1000P
C515, 516	ECFR1H104ZF	50V 0.1U	C705, 706	ECKR1H103ZF5	50V 0.01U	C1107, 1108	ECBT1H473ZF5	50V 0.047U
C551, 552	ECBT1H101KB5	50V 100P	C707	ECA1HM470B	50V 47U Δ	C1109-1111	ECBT1H102KB5	50V 1000P

REPLACEMENT PARTS LIST

Notes: * Important safety notice:


- Components identified by Δ mark have special characteristics important for safety.
 Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.
 When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.
 * The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area.)
 Parts without these indications can be used for all areas.
 * Remote Control Ass'y: Supply period for three years from termination of production.
 * The "(SF)" mark denotes the standard part.

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
				P3	RPN0961	CUSHION (TUNER)	
		PACKING MATERIAL		P3	RPN0951	CUSHION (CD)	
				P3	RPN0950	CUSHION (DECK)	
P1	RPG2819	PACKING CASE (SYSTEM)	(E, EG)	P4	RPQ0164	PAD	
P1	RPG2776	PACKING CASE (SYSTEM)	(EB)	P5	RPF0134	PROTECTION BAG (F. B.)	
P1	RPG2820	PACKING CASE (SYSTEM)	(GC)	P6	SQZD3	AREA LABEL	(E)
P1	RPG2822	PACKING CASE (SYSTEM)	(GN)	P6	SQZD7	AREA LABEL	(EB)
P2	RPG2706	PACKING CASE (AMPLIFIER)		P6	SQZD6	AREA LABEL	(EG)
P2	RPG2708	PACKING CASE (TUNER)		P6	RQLA0066	AREA LABEL	(GC)
P2	RPG2777	PACKING CASE (CD)		P6	RQLA0067	AREA LABEL	(GN)
P2	RPG2707	PACKING CASE (DECK)		P7	RPQ0541	SPACER	
P3	RPN0949	CUSHION (AMPLIFIER)		P8	SPP740	PROTECTION BAG (UNIT)	


Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		ACCESSORIES		A9	RFKSECA10EBK	INSTRUCTION MANUAL ASS'Y	(EB)
				A9	RQT3264-D	INSTRUCTION MANUAL	(EG)
				A9	RQT3265-G	INSTRUCTION MANUAL	(GC)
				A9	RQT3266-B	INSTRUCTION MANUAL	(GN)
A1	RAK-CH744WH	REMOTE CONTROL TRANSMITTER	(E, EG)	A10	RSA0007	FM INDOOR ANTENNA	(E, EB, EG)
A1	RAK-CH745WH	REMOTE CONTROL TRANSMITTER	(EB, GC, GN)	A10	RSA0006	FM INDOOR ANTENNA	(GC, GN)
A1-1	RKK0020-K	BATTERY COVER FOR R.C.T.		A11	RSA0012	AM(LW/MW) LOOP ANTENNA	
A2	REE0393	SPEAKER CORDS		A11-1	RMN0244	ANTENNA HOLDER	
A3	REX0608	FLAT CABLE(SHORT) (20P)		A11-2	XTN3+12AFZ	MOUNTING SCREW	
A4	REX0660	FLAT CABLE(MIDDLE) (19P)		A12	SJP9009	ATTACHMENT PLUG	(EB) △
A5	REX0661	FLAT CABLE(LONG) (15P)		A13	RQLA0134	VOLTAGE CAUTION LABEL	(GC)
A6	RJA0019-2K	AC POWER SUPPLY CORD	(E, EG, GC) △ (SF)	A14	SJP5213-1	POWER PLUG ADAPTOR	(GC) △
A6	RJA0049-K	AC POWER SUPPLY CORD	(EB) △			<GREASE OR JIG/TOOL>	
A6	RJA0036-K	AC POWER SUPPLY CORD	(GN) △			GREASE	
A7	RQA0117	WARRANTY CARD	(E, EB, EG)				
A7	RQX7433ZA	WARRANTY CARD	(GN)				
A8	RQCB0169	SERVICENTER LIST					
A9	RFKSECA10E-K	INSTRUCTION MANUAL ASS'Y	(E)	SA1	RFKX0002	COMPOUND GREASE	

PACKAGING


Tuner: ST-CA10

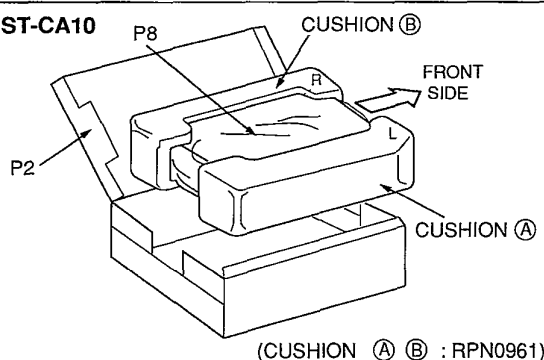


Cassette deck: RS-CA10

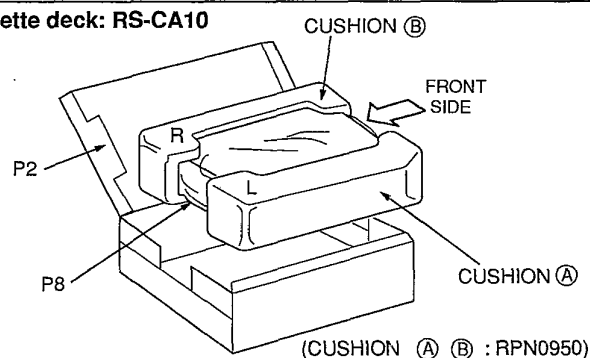


CD Changer: SL-CA10

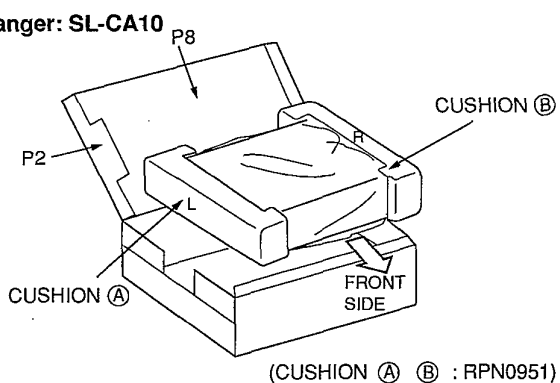


Amplifier: SE-CA10

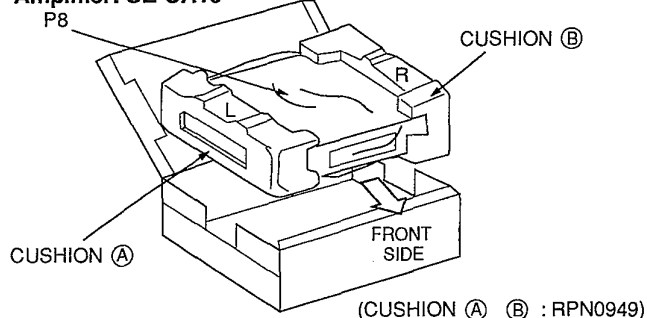

System: SC-CA10

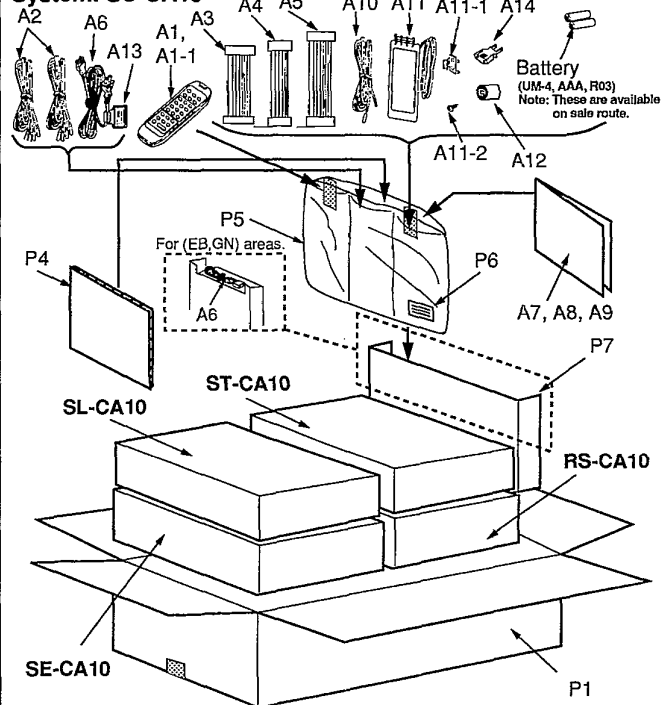

CABINET PARTS LOCATION

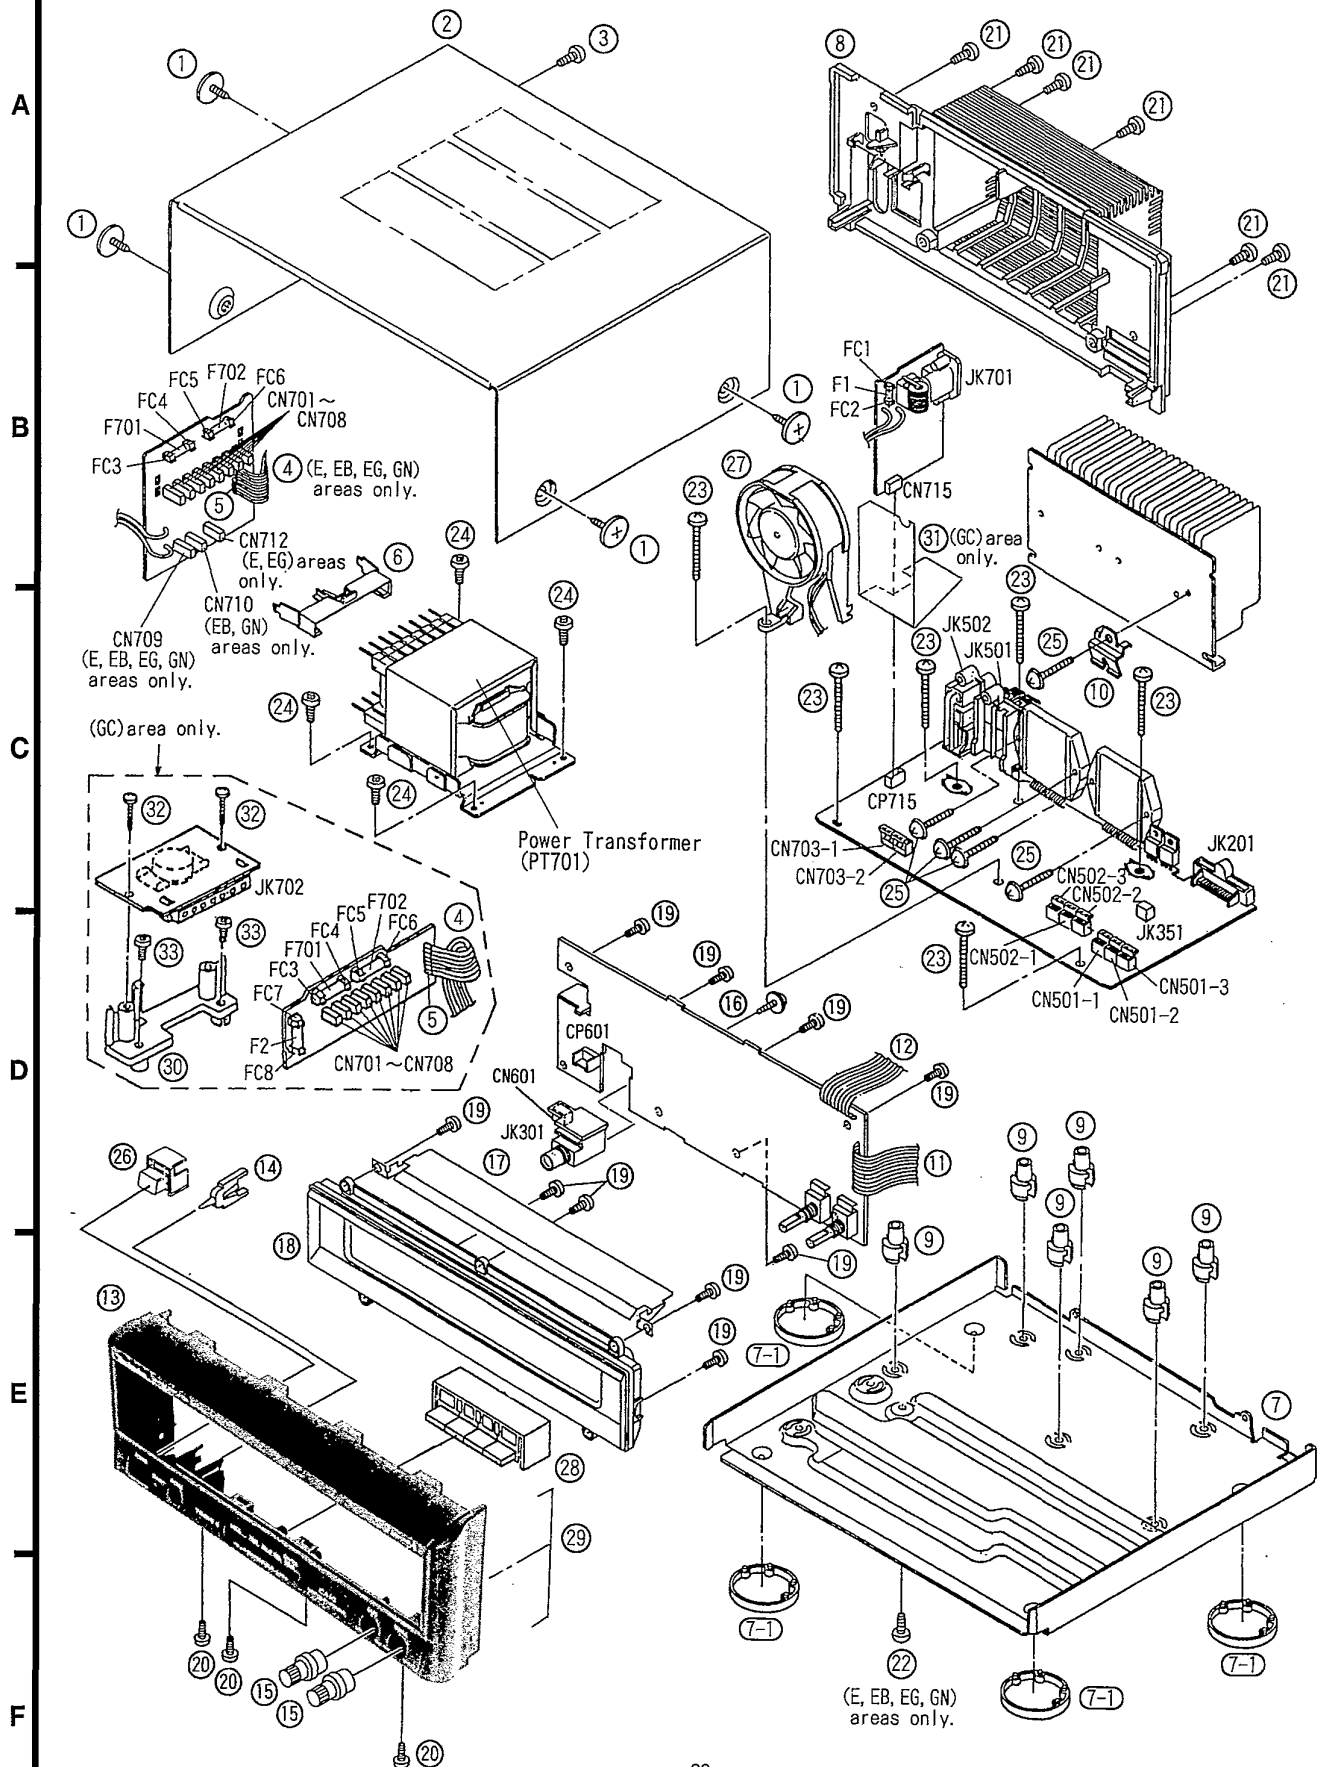

Ref. No.	Part No.	Part Name & Description	Remarks
D361	MA4075MTA	DIODE	
D362	MA165	DIODE	
D371	MA700TA	DIODE	
D372	MA165	DIODE	
D501, 502	MA165	DIODE	
D601, 602	MA4068HTA	DIODE	(GC) Δ
D701-704	1N5402BF	DIODE	Δ
D705, 706	RL1N4003N02	DIODE	Δ
D712	MA4240H	DIODE	
D715, 716	MA4150M	DIODE	Δ
D717	MA4051MTA	DIODE	Δ
D751-754	RL1N4003N02	DIODE	Δ
D755	MA4082LTA	DIODE	Δ
D756	MA165	DIODE	
D761-764	RL1N4003N02	DIODE	Δ
D781, 782	RL1N4003N02	DIODE	Δ
D802	MA4100MTA	DIODE	Δ
D803-806	ISS254TA	DIODE	
D807	MA4100MTA	DIODE	Δ
D831-834	ISS254TA	DIODE	
D836	MA4051-L	DIODE	
D837	MA4056HTA	DIODE	Δ
D838, 839	ISS254TA	DIODE	
D841-844	SLR-305VC	L. E. D.	
D861, 862	MA700TA	DIODE	
D863, 864	ISS254TA	DIODE	
		VARIABLE RESISTOR(S)	
VR601, 602	EVJYV1F03G24	TREBLE/BASS CONTROL	
VR808, 809	EVNDXAA00B53	POWER METER ADJ.	
		COIL (S)	
L501, 502	RLQYR73M	COIL	
L551, 552	RLQYR73M	COIL	
L701	RLQZ271M	COIL	(E, EB, EG, GN) Δ
		TRANSFORMER (S)	
PT701	RTP2N5B003	POWER TRANSFORMER	(E, EB, EG, GN) Δ
PT701	RTP1V5E004-W	POWER TRANSFORMER	(GC) Δ
		LAMP (S)	
PL801-806	XAMR137	LAMP	
		FUSE (S)	
F1	XBA2C16TB0	FUSE, 250V T1. 6A	(E, EB, EG, GN) Δ
F1	XBA2C31TB0	FUSE, 250V T3. 15A	(GC) Δ
F2	XBA2C16TB0	FUSE, 250V T1. 6A	(GC) Δ

Ref. No.	Part No.	Part Name & Description	Remarks
F701, 702	XBA2C16TB0	FUSE, 250V T1. 6A	Δ
		SWITCH(ES)	
S701	ESE37314	VOLTAGE ADJ.	(GC) Δ
S801	EVQ21405R	POWER	
S802	EVQ21405R	MODE	
S803	EVQ21405R	TEST	
S804	EVQ21405R	DELAY TIME	
S805	EVQ21405R	CENTER MODE	
		RELAY (S)	
RL701	RSY0013M-0	RELAY	Δ
		CONNECTOR(S) AND SOCKET	
CN601	RJU057W004	SOCKET (4P)	
CN701-708	RJS1A1101T1	CONNECTOR (1P)	
CN709	RJS1A1101T1	CONNECTOR (1P)	(E, EB, EG, GN)
CN710	RJS1A1101T1	CONNECTOR (1P)	(EB, GN)
CN712	RJS1A1101T1	CONNECTOR (1P)	(E, EG)
CN715	RJU057W004	SOCKET (4P)	
CN501-1-3	RJS1A6604	CONNECTOR (4P)	
CN502-1-3	RJS1A6603	CONNECTOR (3P)	
CN703-1, 2	RJS1A6604	CONNECTOR (4P)	
CP601	RJT057W004-1	CONNECTOR (4P)	
CP715	RJT057W004-1	CONNECTOR (4P)	
JK201	RJT065K20	CONNECTOR (20P)	
JK351	SJT3213	CONNECTOR (2P)	
JK702	SJS702-2	CONNECTOR (7P)	(GC)
		JACK(S) AND TERMINAL (S)	
JK301	RJJ67TA02	HEADPHONES	
JK501	RJR0054	SPEAKER (MAIN)	
JK502	RJH2301MS	SPEAKER (CENTER/SURROUND)	
JK701	SJS9236	AC INLET	(E, EB, EG, GC) Δ
JK701	SJSD16-1	AC INLET	(GN) Δ
		EARTH PLATE (S)	
E501	SNE1004-2	EARTH PLATE	
E701	SNE1004-2	EARTH PLATE	
		FUSE HOLDER(S)	
FC1-6	EYF52BC	FUSE HOLDER	
FC7, 8	EYF52BC	FUSE HOLDER	(GC)

RESISTORS AND CAPACITORS

Notes: * Capacity values are in microfarads (uF) unless specified otherwise, P=Pico-farads (pF) F=Farads (F)
* Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM), 1M=1,000k (OHM)

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
		RESISTORS						
R223, 224	ERDS2TJ332	1/4W 3. 3K	R561	ERDS2TJ151	1/4W 150	R717	ERDS2TJ473	1/4W 47K
R251	ERDS2TJ222	1/4W 2. 2K	R562	ERDS2TJ471	1/4W 470	R731	ERDS2TJ104	1/4W 100K
R253, 254	ERDS2EJ121	1/4W 120	R563, 564	ERDS2TJ563	1/4W 56K	R752	ERDS2TJ822	1/4W 8. 2K
R255	ERDS2TJ154	1/4W 150K	R565, 566	ERD25FVJ100T	1/4W 10 Δ	R761-764	ERDS2TJ1R0	1/4W 1. 0
R256	ERDS2TJ105T	1/4W 1M	R567, 568	ERDS1FVJ100T	1/2W 10 Δ	R765	ERDS2TJ471	1/4W 470
R259	ERDS2TJ561	1/4W 560	R569	ERDS2TJ823T	1/4W 82K	R766	ERDS2TJ563	1/4W 56K
R291, 292	ERDS2TJ822	1/4W 8. 2K	R570	ERDS2TJ124T	1/4W 120K	R777	ERX1SJ6R8E	1W 6. 8
R301, 302	ERDS2TJ222	1/4W 2. 2K	R571	ERDS2TJ823T	1/4W 82K	R778, 779	ERX1SJ5R6E	1W 5. 6
R303, 304	ERDS2TJ333	1/4W 33K	R572	ERDS2TJ124T	1/4W 120K	R780	ERDS2TJ822	1/4W 8. 2K
R305, 306	ERDS2TJ223	1/4W 22K	R573	ERDS2TJ563	1/4W 56K	R783	ERDS2TJ221	1/4W 220
R307, 308	ERDS2TJ222	1/4W 2. 2K	R574	ERDS2TJ564	1/4W 560K	R791, 792	ERDS2TJ101	1/4W 100
R309-312	ERDS2EJ121	1/4W 120	R575	ERDS2TJ223	1/4W 22K	R801, 802	ERDS2TJ272T	1/4W 2. 7K
R351	ERDS2TJ183T	1/4W 18K	R583, 584	ERDS2TJ154	1/4W 150K	R803, 804	ERDS2TJ104	1/4W 100K
R352	ERDS2TJ473	1/4W 47K	R585, 586	ERDS2TJ105T	1/4W 1M	R805, 806	ERDS2TJ155	1/4W 1. 5M
R353	ERDS2TJ223	1/4W 22K	R587, 588	ERDS2EJ121	1/4W 120	R807, 808	ERDS2TJ331	1/4W 330
R354	ERDS2TJ104	1/4W 100K	R589	ERDS2TJ561	1/4W 560	R811, 812	ERDS2TJ821	1/4W 820
R355	ERDS2TJ103	1/4W 10K	R590	ERDS2TJ334	1/4W 330K	R816	ERDS2TJ104	1/4W 100K
R357	ERG1SJ100E	1W 10	R591	ERD2FCVG470T	1/4W 47 Δ	R817, 818	ERDS2TJ221	1/4W 220
R358	ERG1SJ220E	1W 22	R601, 602	ERDS2TJ472	1/4W 4. 7K	R819	ERDS2TJ104	1/4W 100K
R359	ERDS2TJ273	1/4W 27K	R603, 604	ERDS2TJ473	1/4W 47K	R821, 822	ERDS2TJ123	1/4W 12K
R360	ERDS2TJ152	1/4W 1. 5K	R605, 606	ERDS2TJ123	1/4W 12K	R823, 824	ERDS2TJ154	1/4W 150K
R361	ERDS2TJ104	1/4W 100K	R607, 608	ERDS2TJ222	1/4W 2. 2K	R825, 826	ERDS2TJ223	1/4W 22K
R362	ERDS2TJ101	1/4W 100	R609, 610	ERDS2TJ821	1/4W 820	R827, 828	ERDS2TJ102	1/4W 1K
R363, 364	ERDS2TJ103	1/4W 10K	R611, 612	ERDS2TJ122	1/4W 1. 2K	R829	ERDS2TJ222	1/4W 2. 2K
R365	ERDS2TJ335T	1/4W 3. 3M	R613, 614	ERDS2TJ683	1/4W 68K	R831	ERDS2TJ821	1/4W 820
R371	ERDS2TJ683	1/4W 68K	R615, 616	ERDS2TJ123	1/4W 12K	R832	ERDS2TJ102	1/4W 1K
R372	ERDS2TJ561	1/4W 560	R625, 626	ERDS2TJ183T	1/4W 18K	R833	ERDS2TJ122	1/4W 1. 2K
R373	ERDS2TJ101	1/4W 100	R627, 628	ERDS2TJ123	1/4W 12K	R834	ERDS2TJ152	1/4W 1. 5K
R374	ERDS2TJ472	1/4W 4. 7K	R631-634	ERDS2TJ104	1/4W 100K	R836, 837	ERDS2TJ472	1/4W 4. 7K
R375	ERDS2TJ103	1/4W 10K	R635, 636	ERDS2TJ100	1/4W 10 E, EB, EG, GN	R838	ERDS2TJ332	1/4W 3. 3K
R391	ERDS2TJ473	1/4W 47K	R635, 636	ERDS2TJ223	1/4W 22K GC	R841, 842	ERDS2TJ332	1/4W 3. 3K
R501, 502	ERDS2TJ102	1/4W 1K	R637, 638	ERDS2TJ472	1/4W 4. 7K	R843	ERDS2TJ102	1/4W 1K
R503-506	ERDS2TJ563	1/4W 56K	R639, 640	ERDS2TJ100	1/4W 10 E, EB, EG, GN	R844	ERDS2TJ332	1/4W 3. 3K GC
R507, 508	ERDS2TJ102	1/4W 1K	R639, 640	ERDS2TJ223	1/4W 22K GC	R845, 846	ERDS2TJ102	1/4W 1K
R509, 510	ERDS2TJ821	1/4W 820	R641	ERDS2TJ333	1/4W 33K GC	R847	ERDS2TJ221	1/4W 220
R511	ERDS2TJ334	1/4W 330K	R643, 644	ERDS2TJ332	1/4W 3. 3K GC	R848	ERDS2TJ104	1/4W 100K
R512	ERDS2TJ154	1/4W 150K	R651, 652	ERDS2TJ222	1/4W 2. 2K	R849, 850	ERDS2TJ102	1/4W 1K
R513	ERDS2TJ684	1/4W 680K	R653, 654	ERDS2EJ121	1/4W 120	R851	ERDS2TJ331	1/4W 330
R514	ERD25FJ470	1/4W 47 Δ	R655	ERDS2TJ561	1/4W 560	R852	ERDS2TJ391	1/4W 390
R515, 516	ERDS1FVJ100T	1/2W 10 Δ	R657, 658	ERDS2TJ224T	1/4W 220K	R853	ERDS2TJ392T	1/4W 3. 9K
R517, 518	ERD25FVJ100T	1/4W 10 Δ	R701	ERD2FCVJ4R7T	1/4W 4. 7 Δ	R855, 856	ERDS2TJ393	1/4W 39K
R551, 552	ERDS2TJ222	1/4W 2. 2K	R702	ERQ16NkW2R2E	1/6W 2. 2 Δ	R857, 858	ERDS2TJ331	1/4W 330
R553, 554	ERDS2TJ102	1/4W 1K	R703, 704	ERDS2TJ562	1/4W 5. 6K	R861, 862	ERDS2TJ681	1/4W 680
R555, 556	ERDS2TJ104	1/4W 100K	R705	ERDS2TJ333	1/4W 33K	R863	ERDS2TJ222	1/4W 2. 2K
R557, 558	ERDS2TJ563	1/4W 56K	R706	ERDS2TJ100	1/4W 10	R864, 865	ERDS2TJ221	1/4W 220
R559, 560	ERDS2TJ102	1/4W 1K	R709	ERG1SJ331E	1W 330	R870	ERDS2TJ222	1/4W 2. 2K
			R711	ERG1SJ391E	1W 390	R871, 872	ERDS2TJ272T	1/4W 2. 7K
			R713	ERX1SJ6R8E	1W 6. 8	R879	ERDS2TJ221	1/4W 220
			R716	ERDS2TJ392T	1/4W 3. 9K	R885, 886	ERDS2EJ121	1/4W 120

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
R887, 888	ERDS2TJ152	1/4W 1.5K	C553, 554	RCE1HKA3R3BG	50V 3.3U	C710	ECBT1E103ZF	25V 0.01U
			C555, 556	ECBT1H331KB5	50V 330P	C711	ECQE1104KF3	100V 0.1U
		CAPACITORS	C557, 558	ECBT1C122KR5	16V 1200P	C712	ECBT1E223ZF	25V 0.022U
			C561, 562	ECBT1H150J5	50V 15P	C714	ECKR1H103ZF5	50V 0.01U
C251	RCE0JKA221BV	6.3V 220U	C563, 564	RCE1HKA4R7BG	50V 4.7U	C715	ECA1VHG471B	35V 470U
C301, 302	RCE1CKA100BG	16V 10U	C565, 566	ECFR1H104ZF	50V 0.1U	C731	ECEA1HKN010B	50V 1U
C303-306	ECBT1H101KB5	50V 100P	C567, 568	RCE0JKA470BG	6.3V 47U	C761	ECA1EM102B	25V 1000U Δ
C307, 308	RCE1CKA220BG	16V 22U	C569	ECA2AAP100B	100V 10U	C762	ECBT1E103ZF	25V 0.01U
C309, 310	RCE1HKA3R3BG	50V 3.3U	C571	RCE0JKA101BV	6.3V 100U	C781	ECA1EM101B	25V 100U Δ
C353	ECEA1HKA2R2B	50V 2.2U	C572	ECBT1E223ZF	25V 0.022U	C799	ECBT1H104ZF5	50V 0.1U
C361	ECEA1KA221B	10V 220U	C601, 602	RCE1HKA3R3BG	50V 3.3U	C801, 802	ECEA1EKN3R3B	25V 3.3U
C362, 363	RCE1CKA100BG	16V 10U	C603-606	ECBT1H101KB5	50V 100P	C803, 804	ECEA1HKA2R2B	50V 2.2U
C364	ECBT1E103ZF	25V 0.01U	C607, 608	ECBT1H151KB5	50V 150P	C805	RCE1HKA4R7BG	50V 4.7U
C371	RCE0JKA101BV	6.3V 100U	C609, 610	ECBT1E103ZF	25V 0.01U	C806	RCE0JKA221BV	6.3V 220U
C372	ECBT1E103ZF	25V 0.01U	C611, 612	RCE1HKA3R3BG	50V 3.3U	C808, 809	ECBT1E223ZF	25V 0.022U
C381, 382	ECBT1E103ZF	25V 0.01U	C613, 614	RCE1CKA100BG	16V 10U	C810	RCE1HKA4R7BG	50V 4.7U
C397, 398	ECBT1E103ZF	25V 0.01U	C615, 616	ECEA1HKA010B	50V 1U	C831	RCE1CKA100BG	16V 10U
C501, 502	ECA1HAP3R3B	50V 3.3U	C617, 618	ECQV1H823JM3	50V 0.082U	C832	ECBT1E103ZF	25V 0.01U
C503, 504	ECBT1C152KR5	16V 1500P	C623, 624	ECBT1E103ZF	25V 0.01U GC	C833	ECBT1H104ZF5	50V 0.1U
C505, 506	ECBT1H150J5	50V 15P	C626	ECBT1E103ZF	25V 0.01U GC	C834, 835	ECBT1H471KB5	50V 470P
C507, 508	ECBT1C682KR5	16V 6800P	C631, 632	RCE1HKA3R3BG	50V 3.3U	C836, 837	RCE1HKA3R3BG	50V 3.3U
C509, 510	RCE1CKA220BG	16V 22U	C633, 634	ECBT1C822KS5	16V 8200P	C855, 856	ECBT1C682KR5	16V 6800P
C511, 512	ECBT1C122KR5	16V 1200P	C653	RCE1CKA101BV	16V 100U	C905, 906	ECBT1H101KB5	50V 100P
C513	ECA1VM101B	35V 100U	C701, 702	ECES1H682VNG	50V 6800U Δ	C1101, 1102	ECBT1H473ZF5	50V 0.047U
C514	ECA2AAP100B	100V 10U	C703, 704	ECEA1CKA330B	16V 33U	C1103-1106	ECBT1H102KB5	50V 1000P
C515, 516	ECFR1H104ZF	50V 0.1U	C705, 706	ECKR1H103ZF5	50V 0.01U	C1107, 1108	ECBT1H473ZF5	50V 0.047U
C551, 552	ECBT1H101KB5	50V 100P	C707	ECA1HM470B	50V 47U Δ	C1109-1111	ECBT1H102KB5	50V 1000P

REPLACEMENT PARTS LIST

Notes: * Important safety notice:


- Components identified by Δ mark have special characteristics important for safety.
 Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.
 When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.
 * The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area.)
 Parts without these indications can be used for all areas.
 * Remote Control Ass'y: Supply period for three years from termination of production.
 * The "(SF)" mark denotes the standard part.

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
				P3	RPN0961	CUSHION (TUNER)	
		PACKING MATERIAL		P3	RPN0951	CUSHION (CD)	
				P3	RPN0950	CUSHION (DECK)	
P1	RPG2819	PACKING CASE (SYSTEM)	(E, EG)	P4	RPQ0164	PAD	
P1	RPG2776	PACKING CASE (SYSTEM)	(EB)	P5	RPF0134	PROTECTION BAG (F. B.)	
P1	RPG2820	PACKING CASE (SYSTEM)	(GC)	P6	SQZD3	AREA LABEL	(E)
P1	RPG2822	PACKING CASE (SYSTEM)	(GN)	P6	SQZD7	AREA LABEL	(EB)
P2	RPG2706	PACKING CASE (AMPLIFIER)		P6	SQZD6	AREA LABEL	(EG)
P2	RPG2708	PACKING CASE (TUNER)		P6	RQLA0066	AREA LABEL	(GC)
P2	RPG2777	PACKING CASE (CD)		P6	RQLA0067	AREA LABEL	(GN)
P2	RPG2707	PACKING CASE (DECK)		P7	RPQ0541	SPACER	
P3	RPN0949	CUSHION (AMPLIFIER)		P8	SPP740	PROTECTION BAG (UNIT)	


Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		ACCESSORIES		A9	RFKSECA10EBK	INSTRUCTION MANUAL ASS'Y	(EB)
				A9	RQT3264-D	INSTRUCTION MANUAL	(EG)
				A9	RQT3265-G	INSTRUCTION MANUAL	(GC)
				A9	RQT3266-B	INSTRUCTION MANUAL	(GN)
A1	RAK-CH744WH	REMOTE CONTROL TRANSMITTER	(E, EG)	A10	RSA0007	FM INDOOR ANTENNA	(E, EB, EG)
A1	RAK-CH745WH	REMOTE CONTROL TRANSMITTER	(EB, GC, GN)	A10	RSA0006	FM INDOOR ANTENNA	(GC, GN)
A1-1	RKK0020-K	BATTERY COVER FOR R.C.T.		A11	RSA0012	AM(LW/MW) LOOP ANTENNA	
A2	REE0393	SPEAKER CORDS		A11-1	RMN0244	ANTENNA HOLDER	
A3	REX0608	FLAT CABLE(SHORT) (20P)		A11-2	XTN3+12AFZ	MOUNTING SCREW	
A4	REX0660	FLAT CABLE(MIDDLE) (19P)		A12	SJP9009	ATTACHMENT PLUG	(EB) △
A5	REX0661	FLAT CABLE(LONG) (15P)		A13	RQLA0134	VOLTAGE CAUTION LABEL	(GC)
A6	RJA0019-2K	AC POWER SUPPLY CORD	(E, EG, GC) △ (SF)	A14	SJP5213-1	POWER PLUG ADAPTOR	(GC) △
A6	RJA0049-K	AC POWER SUPPLY CORD	(EB) △			<GREASE OR JIG/TOOL>	
A6	RJA0036-K	AC POWER SUPPLY CORD	(GN) △			GREASE	
A7	RQA0117	WARRANTY CARD	(E, EB, EG)				
A7	RQX7433ZA	WARRANTY CARD	(GN)				
A8	RQCB0169	SERVICENTER LIST					
A9	RFKSECA10E-K	INSTRUCTION MANUAL ASS'Y	(E)	SA1	RFKX0002	COMPOUND GREASE	

PACKAGING


Tuner: ST-CA10

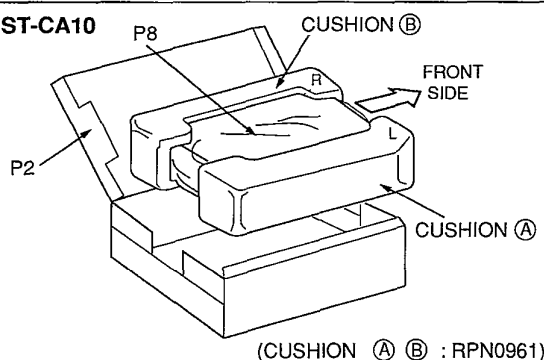


Cassette deck: RS-CA10

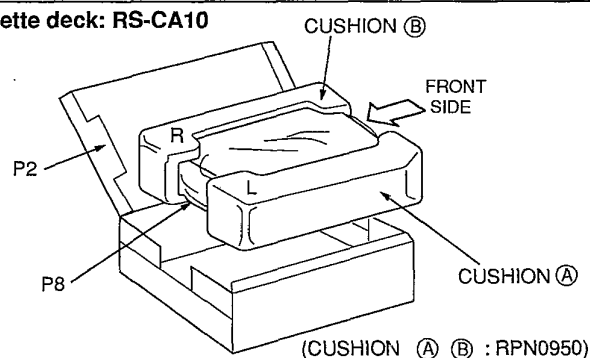

CD Changer: SL-CA10

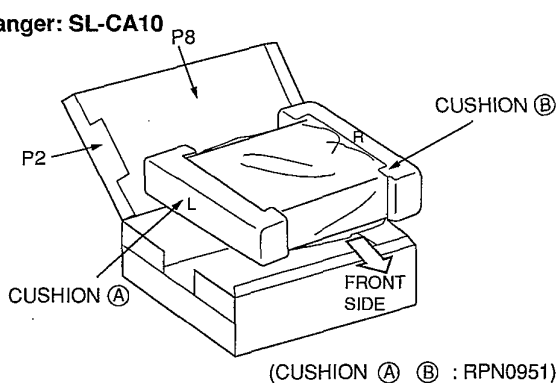

Amplifier: SE-CA10

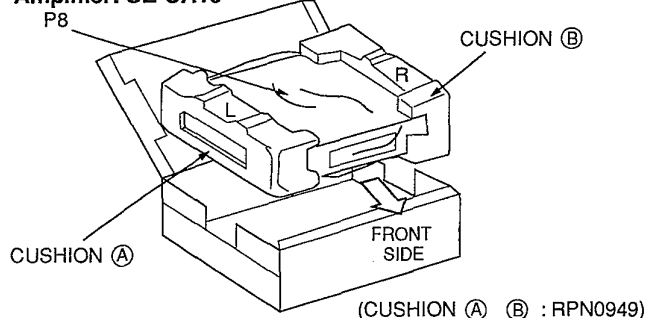

System: SC-CA10

