




Drawn By Steve Luckey 02/16/2015





# BRITISH DOUBLE LITE

*Layout by Steve Luckey*

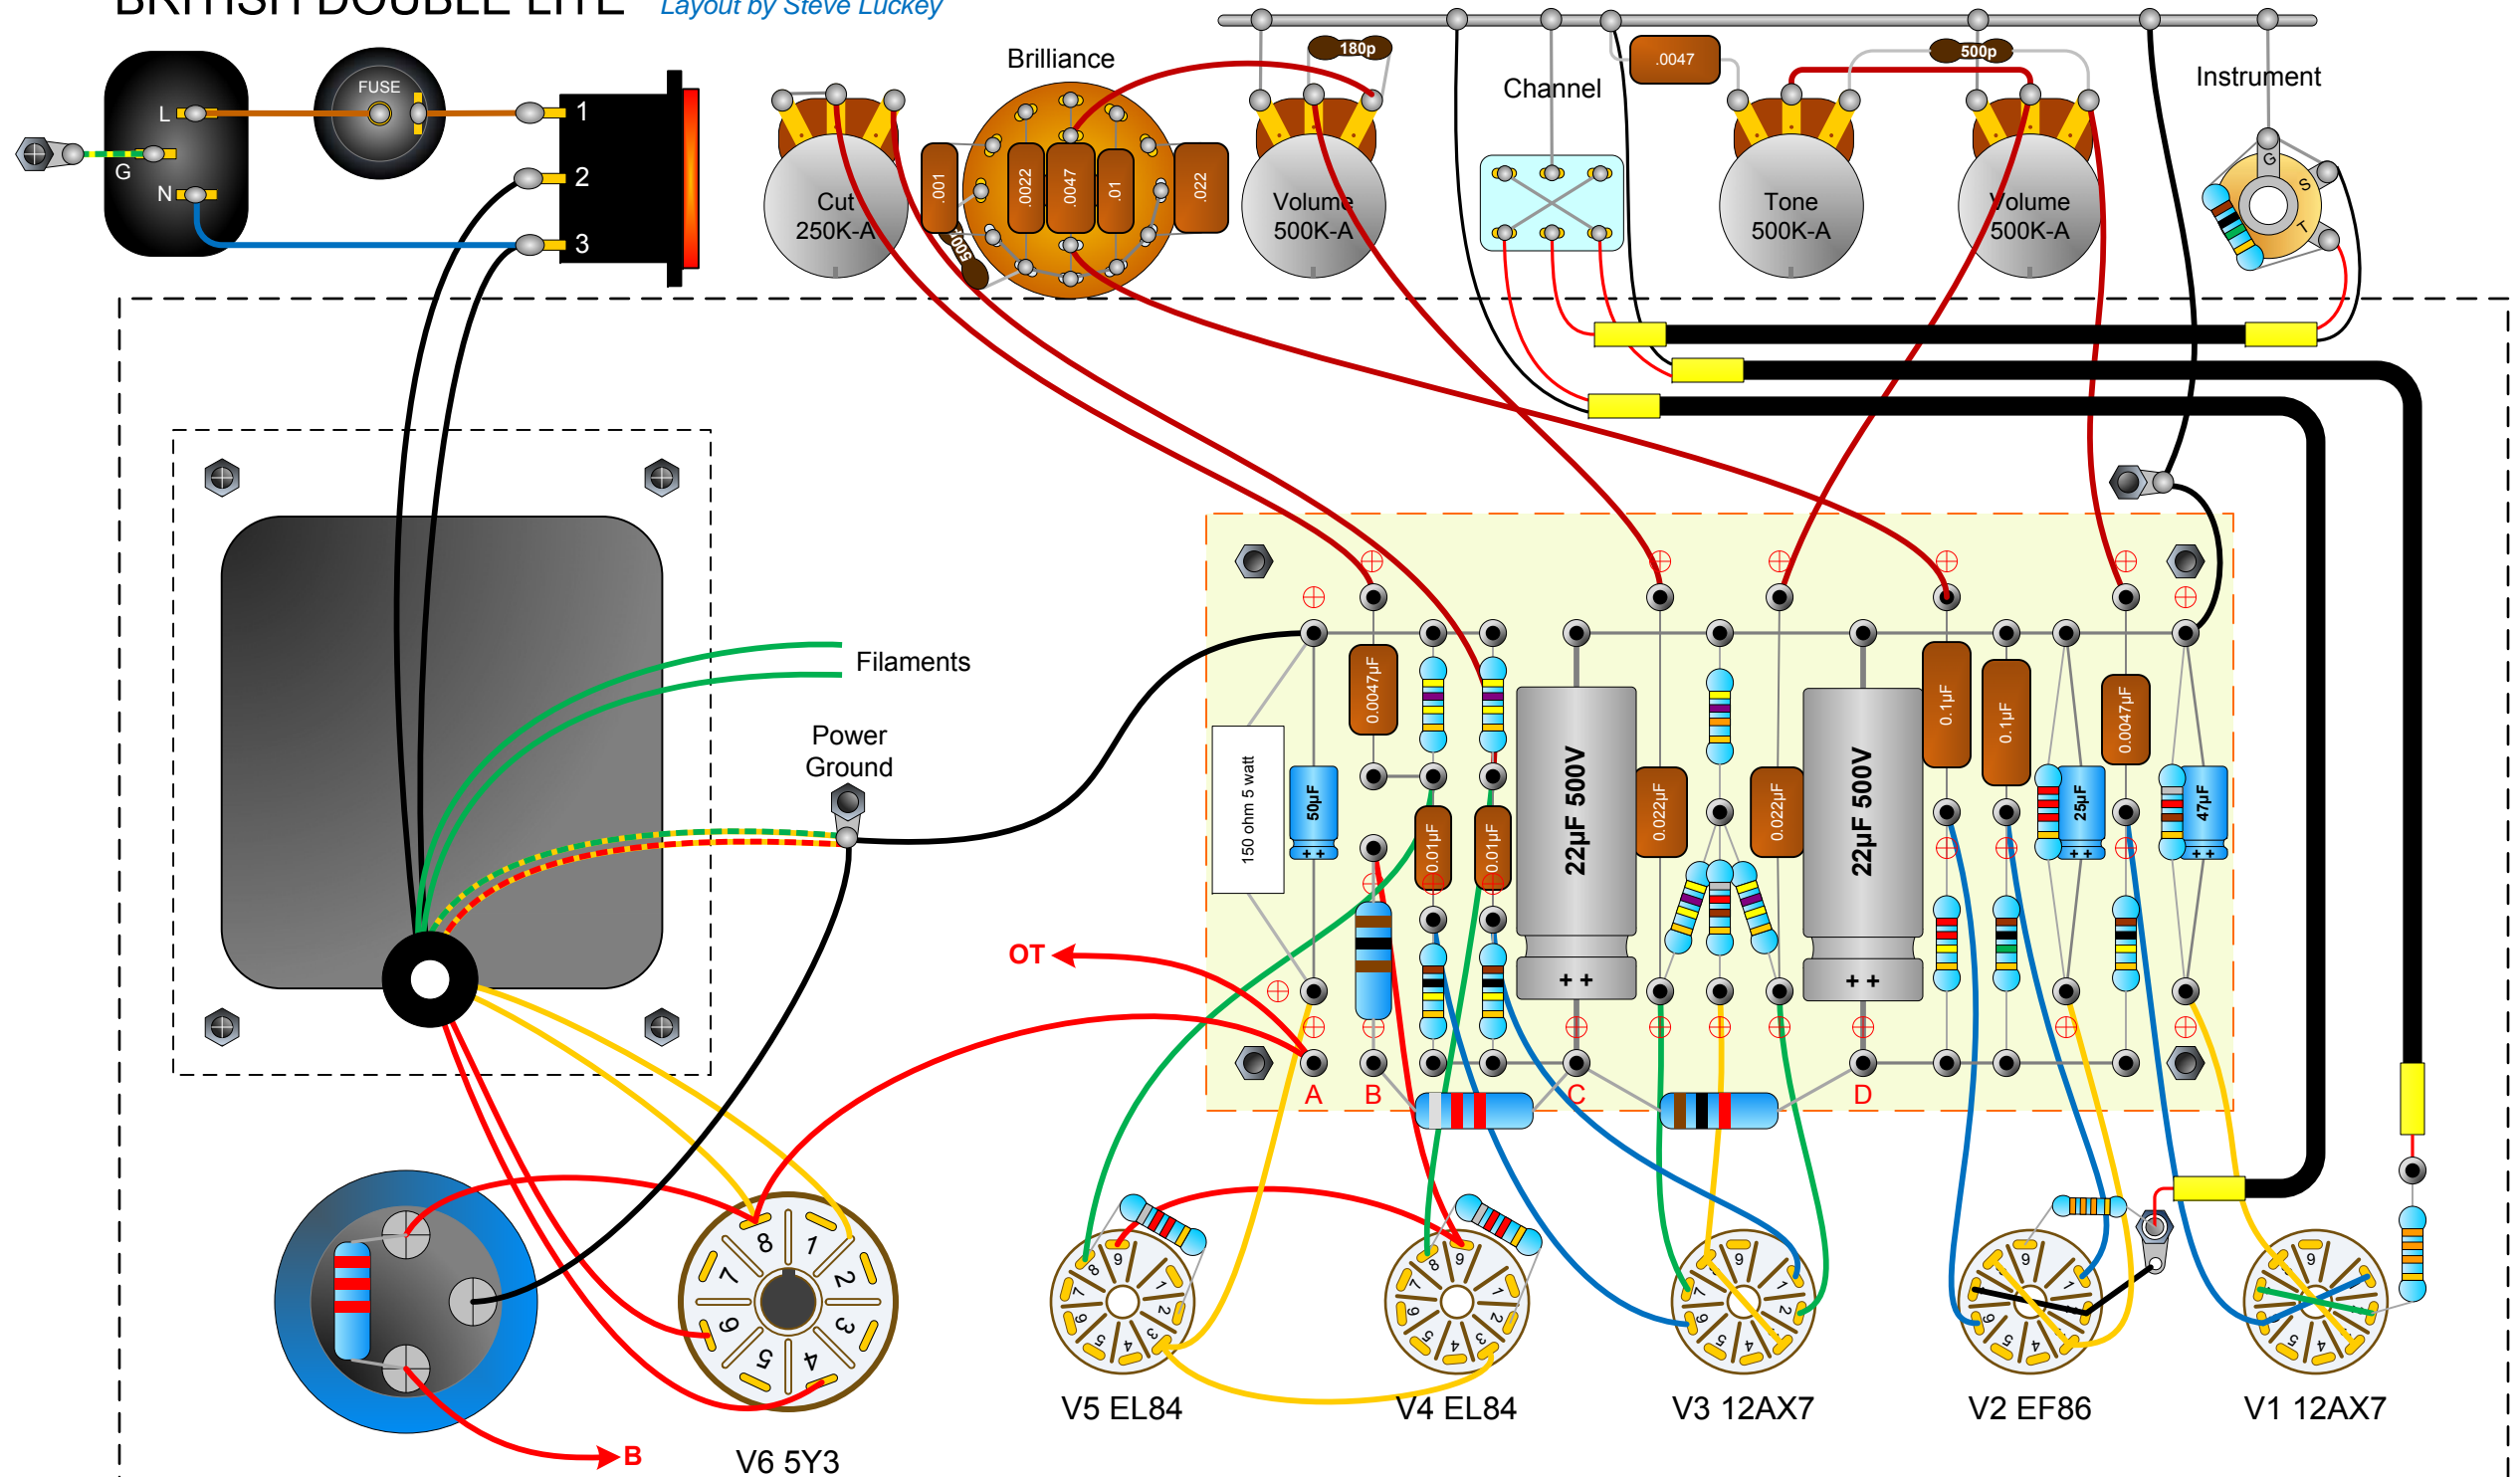

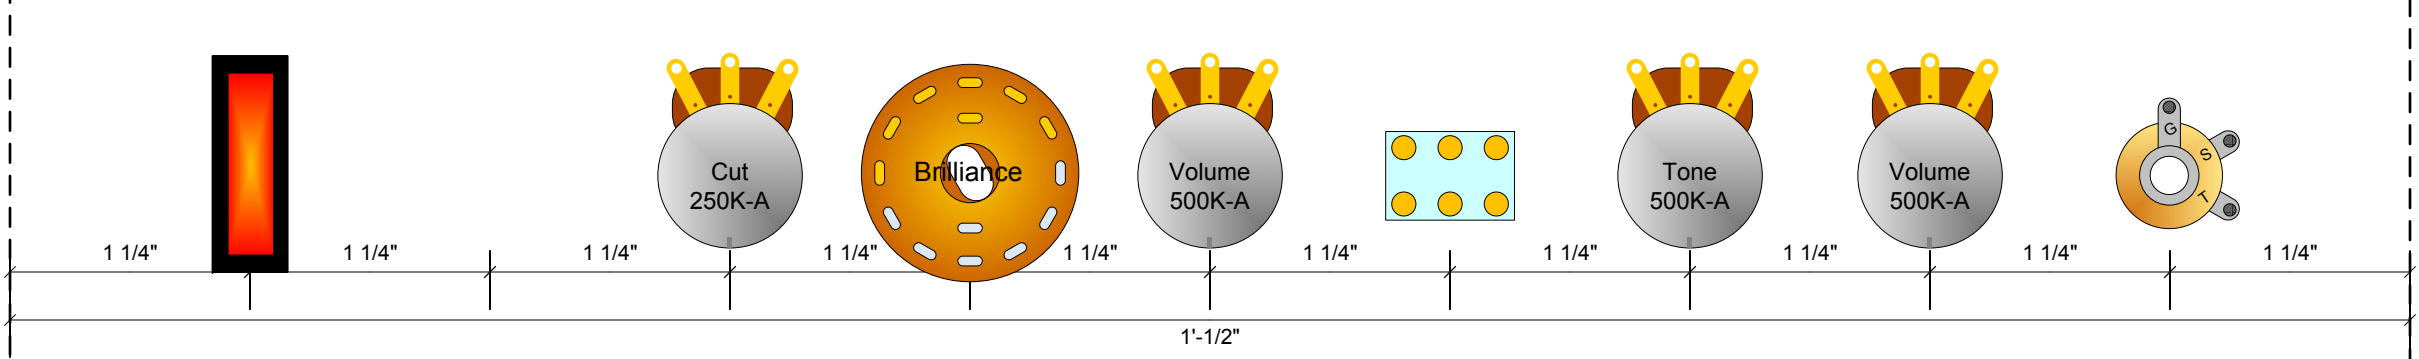

Chassis Dimensions  
12 1/2" X 6 1/2" X 2 1/2"

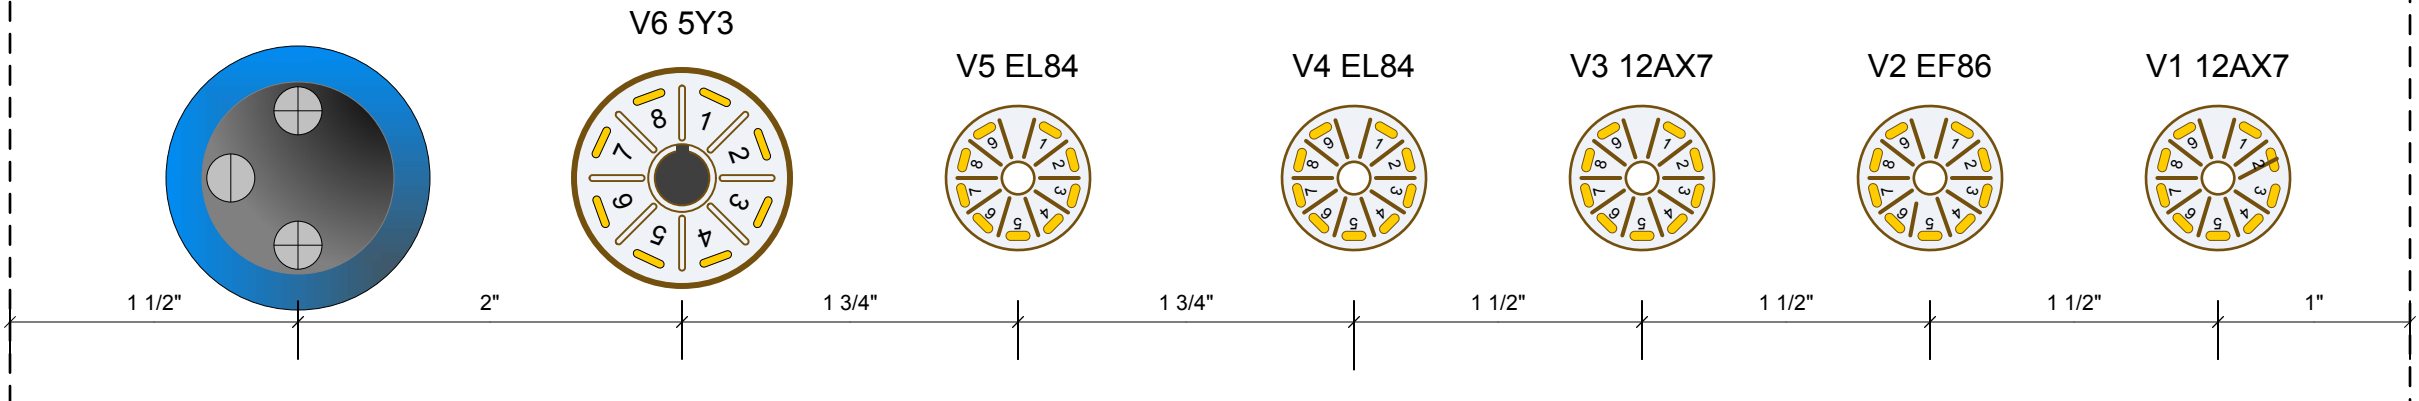
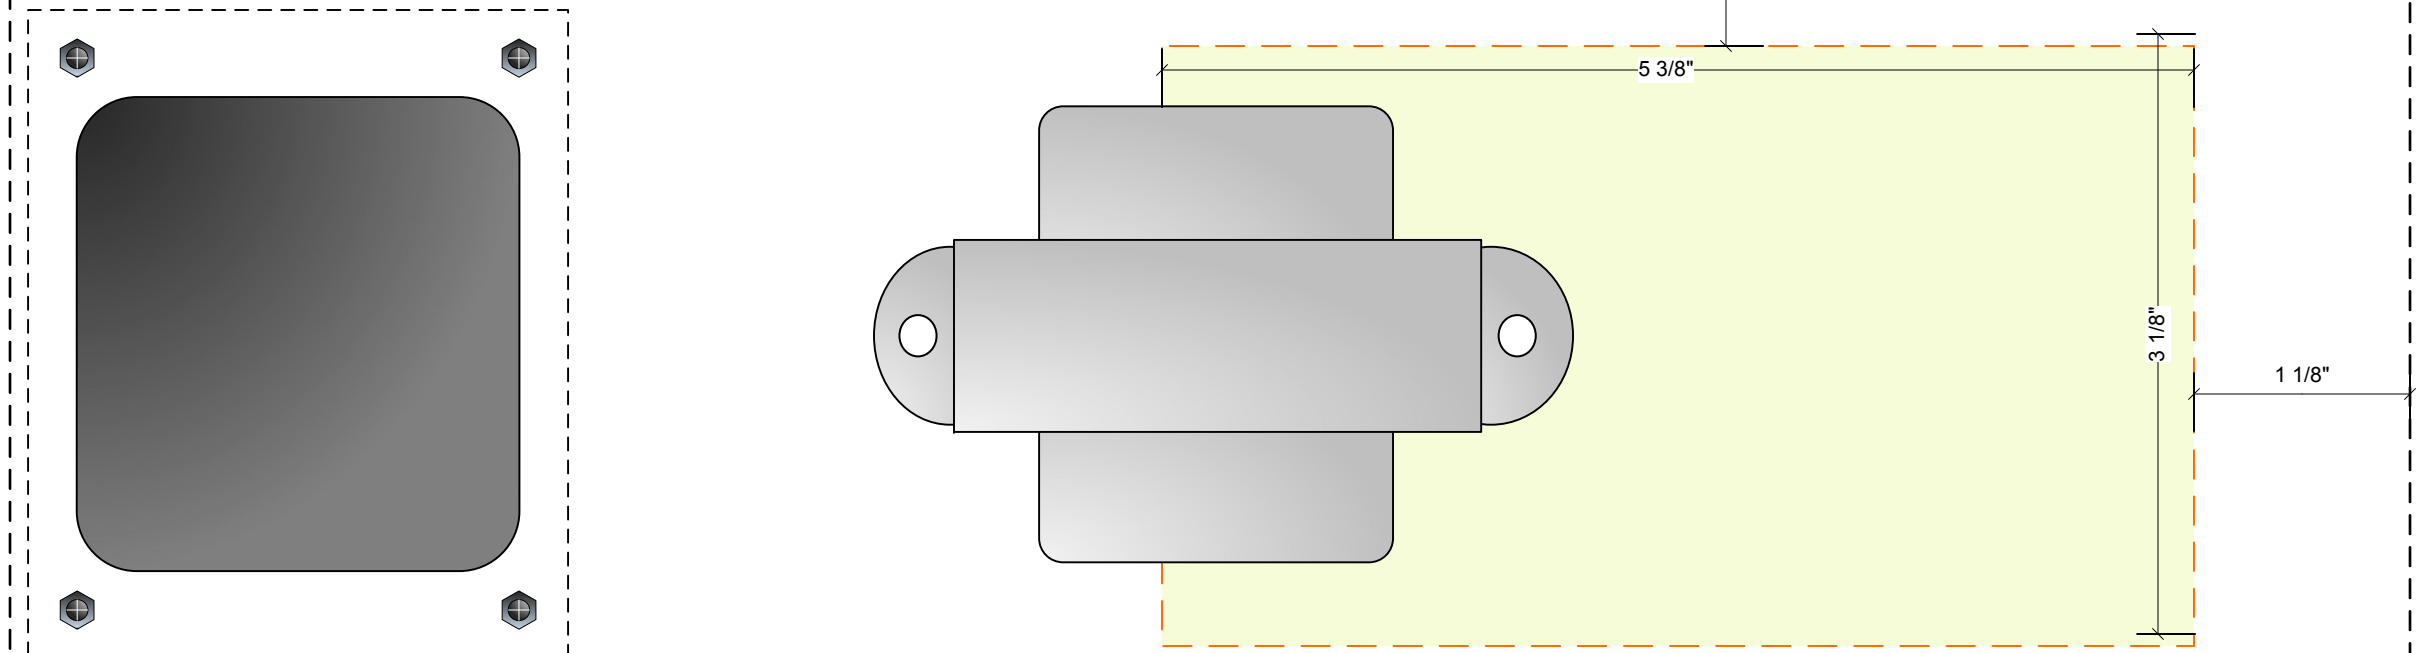



# DRILL GUIDE

## INSTRUCTIONS FOR PRINTING DRILL GUIDE

- ⊕ Turret --- drill size is 3/32"
- ⊕ Standoff – drill size to fit
- ⊕ Hole for wire pass thru – drill size to fit
- Dashed lines are underboard jumpers

Board size is 3 1/8" X 5 3/8". Print this drill guide FULL SIZE on letter sized paper. Use one template as a drill guide. The other template will be used for installing jumpers. Measure the board length of the printout to verify it is 5 3/8". Attach to blank board using double sided carpet tape. Use a center punch to put a mark at the cross hairs of each turret, standoff, and hole. Use a 3/32" drill bit to drill all holes. Then enlarge holes as needed for screws and wire pass thru.

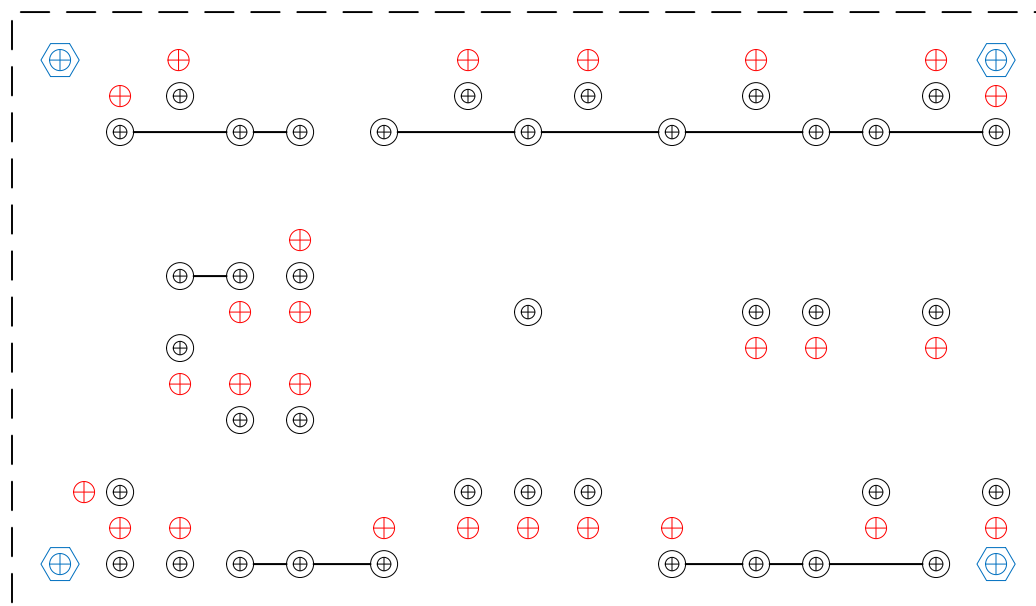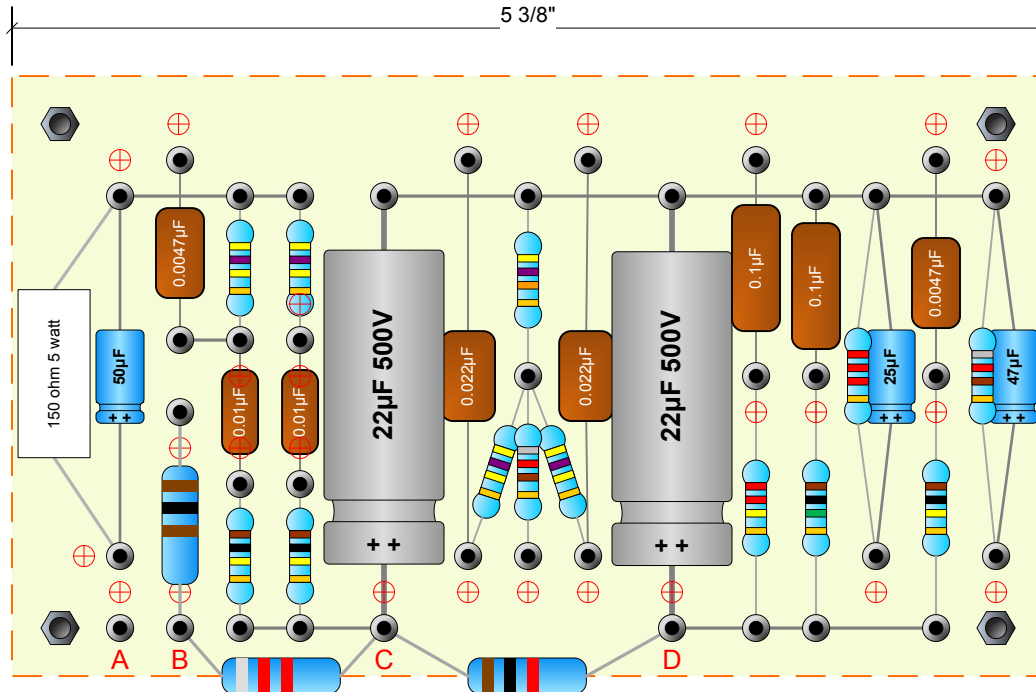

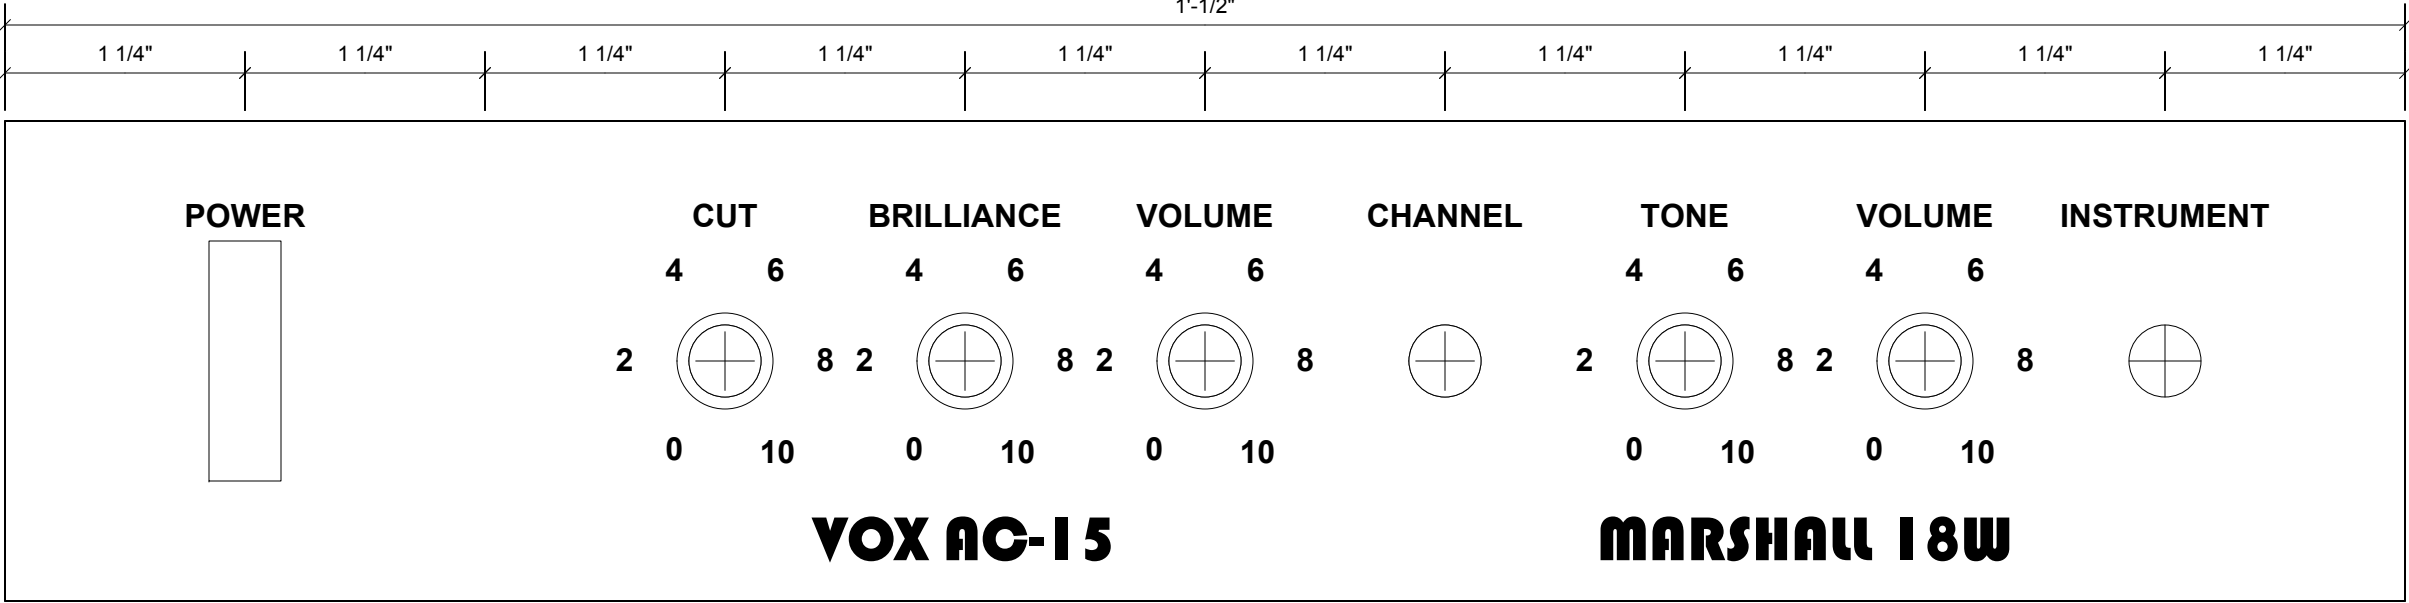

VOX AC-15

MARSHALL 18W

